neptronic®

Steam Humidifier SK300 series

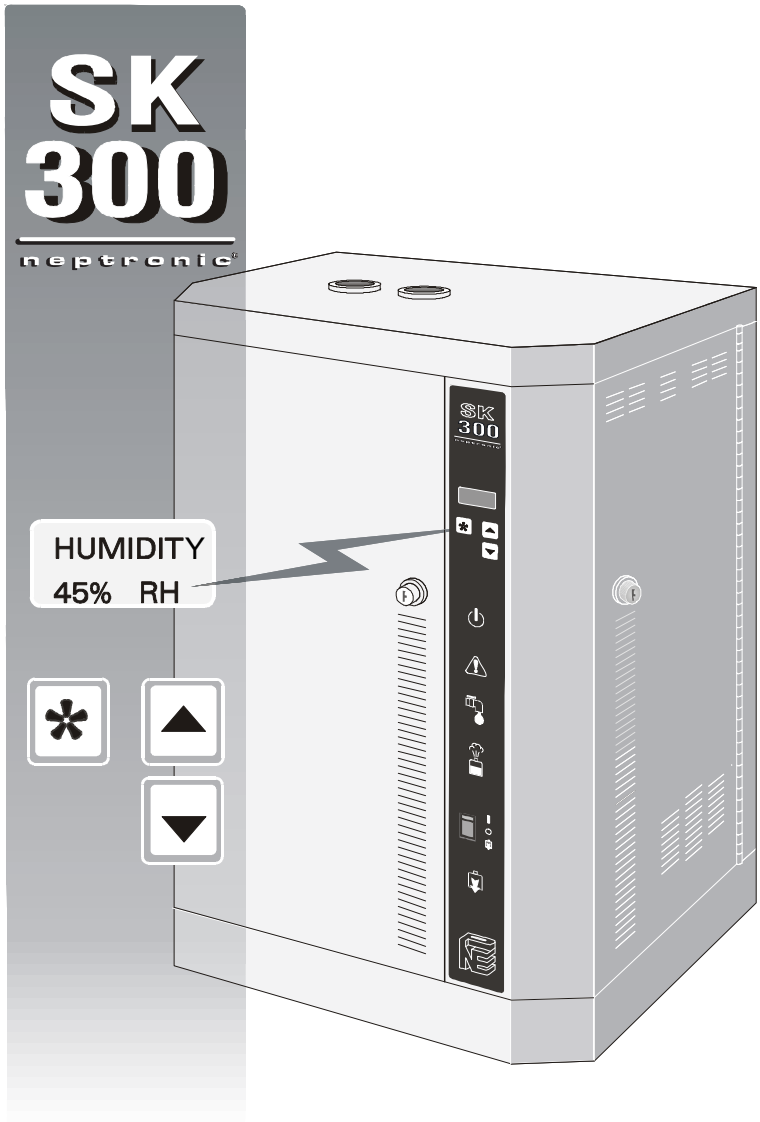

Installation instruction & user manual

READ AND SAVE THESE INSTRUCTIONS

C SP US

Foreword

1. These installation instructions and operation manual have been developed to facilitate the installation and the operation of the **SK300** series steam humidifier.
   The strict application of these instructions will ensure the conformity of your installation and operation as per manufacturer's recommendations.
2. The application of these instructions is one of the conditions for the application of the warranty.
3. The application of these instructions does not ensure at any time conformity to procedures, regulation or local codes, regarding electric installation and connection to local water supply.
4. This product has been declared to conform to applicable Canadian and American safety standards and directives and bear the CSA (c) & (us) mark. The certificate of conformity CSA is available upon request to the manufacturer.
5. © 2013: All right reserved, this document cannot be reproduced totally or partially by any mean whether, electronic, mechanical, photocopy, recording or other, without prior written authorization of National Environmental Products Ltd.

Manufacturer Presentation

National Environmental Products Ltd. (NEP) is the owner of the brand Neptronic®.
NEP develops, manufactures and services a complete line of:

- Steam humidifiers,
- Humidistat among the most precise and the most reliable on the market,
- Actuators to regulate air damper or valves,
- Electric heaters,
- Thermostats and other control peripherals used to control HVAC equipment.

For more information about our products, visit our web site at ***www.neptronic.com***

Each Neptronic® product benefits from over 35 years of experience of our qualified staff.
From the inspiration to realization, innovation has been the standard in design. As the result of this dedication, NEP Ltd. owns several patents, notably the ENERDRIVE system and the AFEC system.
Manufacturing is conducted on the premises of our modern 80,000 sq.ft. (7 000m^2) facility in Montreal, Canada.
Our quality system is built on the ISO 9001 model.

Our vision **" Customer for Life"** is realized by listening to their needs and by supplying them with products, which exceed their expectations in quality, functionality and durability.

National Environmental Products Ltd.
Tel. *(Toll free)*: 1 800 361-2308
Tel.: (1) (514) 333-1433
Fax: (1) (514) 333-3163
Fax Customer service: (514) 333-1091

Business hours: from Monday to Friday, 8:00am to 5:00pm (Eastern time)

Table of contents

Foreword and Manufacturer Presentation ..... **i**
1. Presentation **2**
1.1. Overview *2*
1.2. Option BACnet network communication *3*
1.3. Definition *3*
2. Characteristics **4**
2.1. Dimensions & weight *4*
2.2. Option – Weather proof enclosure general dimension and weight *5*
2.3. Output and power consumption *6*
3. Mechanical installation **7**
3.1. General recommendations *7*
3.2. Positioning *7*
3.3. Wall mounting *7*
3.4. Weather proof enclosure unit positioning and mounting *8*
4. Steam dispersion system selection and positioning **9**
4.1. Steam dispersion system selection *9*
4.2. Positionning of S.A.M or S.A.M.E2 ..... *11*
5. Steam output connection **14**
5.1. Typical installation *14*
5.2. General recommendations *14*
5.3. Installation of "S" traps on the steam line *14*
5.4. Position of steam output *15*
5.5. Installation of humidifier with Space Distribution Unit (SDU) *16*
6. Plumbing connection **17**
6.1. Water supply *17*
6.2. Drain connection *18*
6.3. Weather proof enclosure plumbing connection *18*
7. Power supply connections **19**
8. Low voltage control connections **20**
8.1. "ON/OFF" Humidifier *20*
8.2. Modulating Humidifier *20*
8.3. Common Alarm Connections *24*
8.4. Controls Placement (steam dispersed into a duct or AHU) *24*
9. Front panel display features **25**
9.1. Description display modes *26*
9.2. Programming *28*
10. Control p.c. board **29**
10.1. Main p.c. board *29*
10.2. Modulating p.c. board *29*
11. Start up procedure **30**
12. Service **31**
12.1. General *31*
12.2. Evaporation chamber cleaning *31*
13. Exploded view & Bill of Material **34**
13.1. Exploded view *34*
13.2. Bill of material *35*
14. Trouble shouting guide **37**
General condition of Sale & Warranty 40

1. Presentation

Thank you to have chosen one of the Neptronic® products. You have purchased the best and the most robust humidifier for its category.

1.1. Overview

1.1.1. List of accessories supplied

- 2 sets of keys.
- 2 adjustable collars for the connection of the steam hose for each steam output.
- 1 female compression fitting ¾ hydraulic for the drain output of the evaporation chamber.
- 1 female compression fitting ½ hydraulic for the drain output of the drip pan.
- 1 female fitting and a braided hose for the water supply connection.
- 1 Installation instruction and operation manual.

1.1.2. Overview of the Humidifier

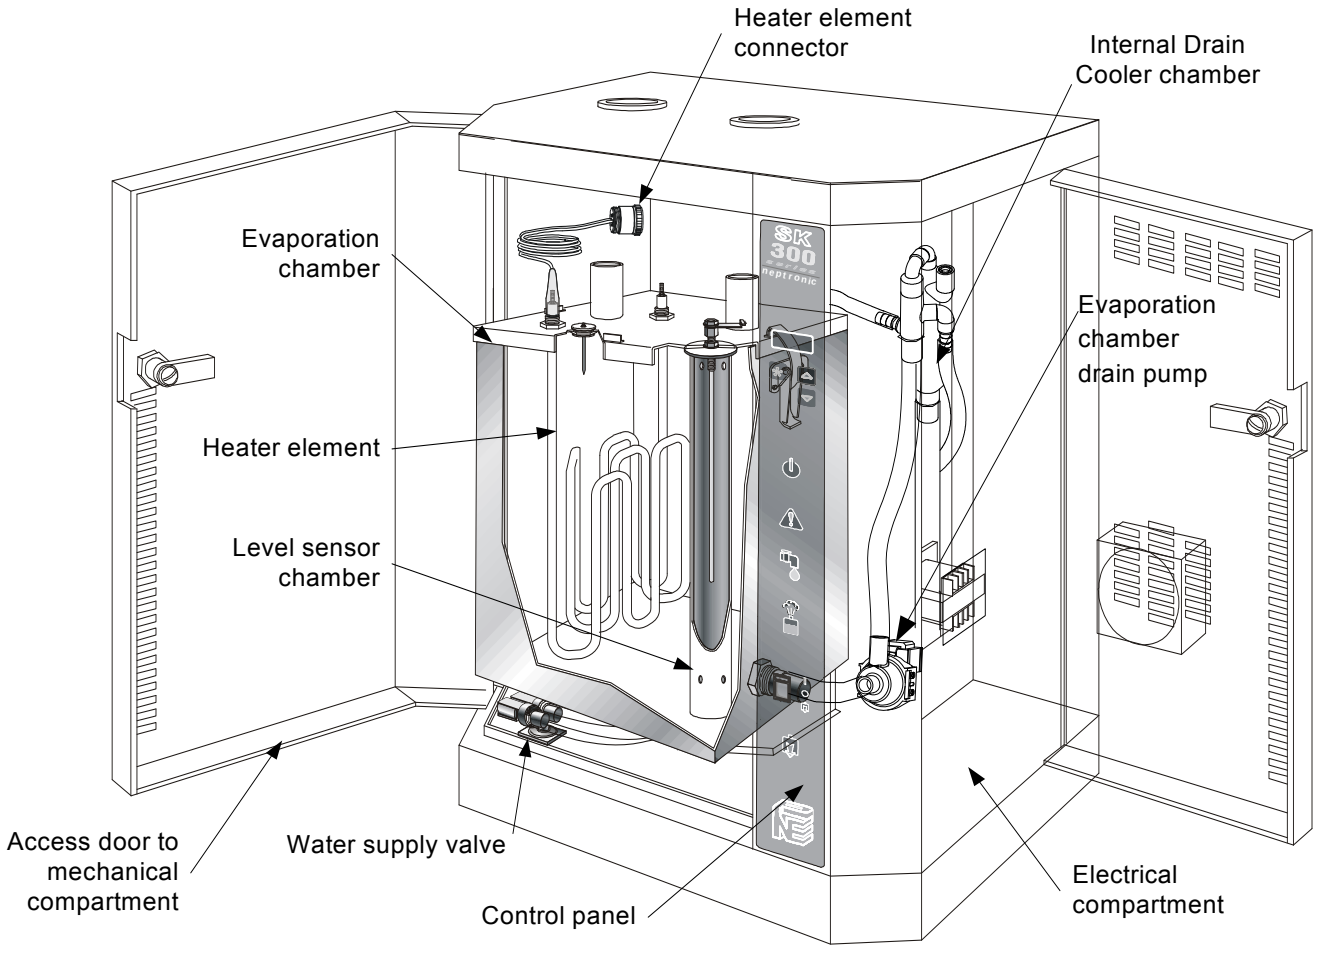

(Illus. 1)

1.1.3. Options avalaible

The following options are available when purchasing a SK300 humidifier:

- Modulating control humidifier – suffix M (i.e. SK320**M**)
- Humidifier for system supplied with Deionised water or Reverse Osmosis water, dissolved solids more than 1 ppm (SF DI-APPLICATION)
- Humidifier for system supplied with Deionised water or Reverse Osmosis water, dissolved solids more than 0.028 ppm (SF ULTRAPURE-DI)
- Space Distribution Unit mounted on humidifier (SDU) or remote installation (SDU-REM)
- Network communication system, BACnet – suffix B (i.e. SK320M-600-3**B**)
- Stainless steel humidifier cabinet – suffix P (i.e. SK320M-600-3**P**)
- Dry contact to activate an external fan relay on a call for humidity (SF SK300FANRELAY)

1.2. Option BACnet network communication

The SK300 humidifier series is available with the BACnet communication module. The following list is a summary of the objects available with this option.

- Humidity demand (0-100%R.H.)
- Room and duct humidity (0-100%R.H.)
- Drain and service delay
- PID adjustment
- Set point adjustment
- Humidity and temperature offset
- Lock On capacity adjustment
- Actual operating status
- Alarm indications

Consult the BACnet Communication Module User Guide at www.neptronic.com for additional information.

1.3. Definition

1.3.1. Evaporation chamber

Assembly including the metal cylinder and a cover equipped with one or several heater elements. It is the heart of the humidifier, which produce steam.

1.3.2. SDU (Space Distribution Unit)

Integrated steam distribution unit, optional on certain humidifiers.

1.3.3. Multi-Steam system

Custom made system of steam distribution. This system is designed to allow very short absorption distances (less than 3 feet or 900mm).

1.3.4. S.A.M. (Steam Absorption Manifold)

Steam manifold adapted to air duct size to allow steam absorption in relatively short distance (less than 5 feet or 1500mm).

1.3.5. S.A.M.E2 (Steam Absorption Manifold with 2 Eyelets)

Steam manifold with two eyelets adapted to application with restricted air duct dimensions to allow steam absorption in relatively short distance (less than 5 feet or 1500mm).

2. Characteristics

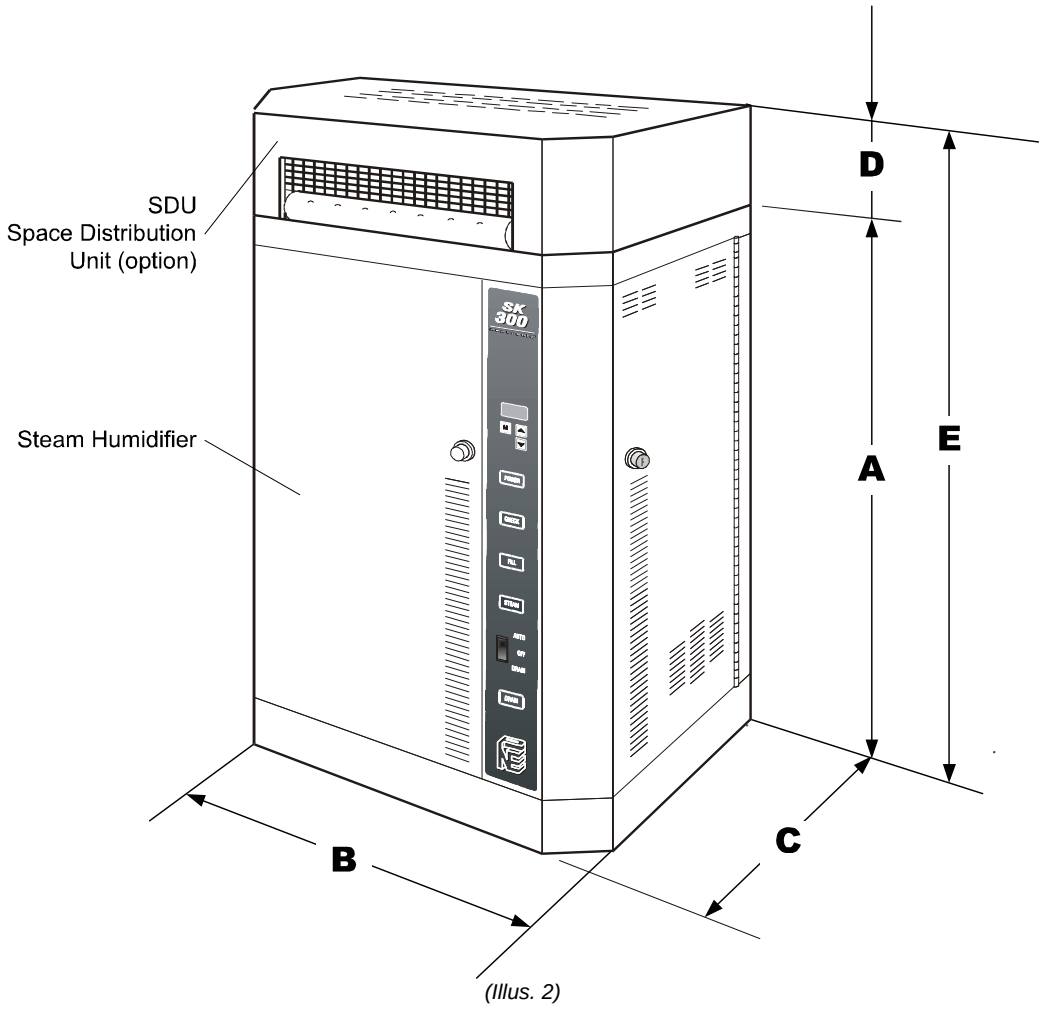

(Illus. 2)

2.1. Dimensions & weight

Model	Dimensions of the cabinet inch (mm)							Option SDU Model Weight lb (kg)
	A	B	C	D	E	Weight lb (kg)		
						Empty	Full of water	
SK302	23 ½ (597)	18 ½ (470)	11 ½ (292)	5 ⅝ (140)	29 ⅛ (737)	44 (20)	57 (26)	SDU-1 20 (9)
SK304								
SK306								
SK310	28 ½ (724)	21 (533)	12 ½ (318)	6 ⅝ (165)	35 ⅛ (890)	66 (30)	115 (52)	SDU-2 25 (11)
SK314								
SK320	28 ½ (724)	21 (533)	12 ½ (318)	12 ⅞ (324)	41 ⅜ (1048)	66 (30)	115 (52)	SDU-3 45 (20)
SK330								
SK340	31 ¼ (794)	32 (813)	12 ½ (318)	-	-	110 (50)	205 (93)	-
SK360								

2.2. Option – Weather proof enclosure general dimension and weight

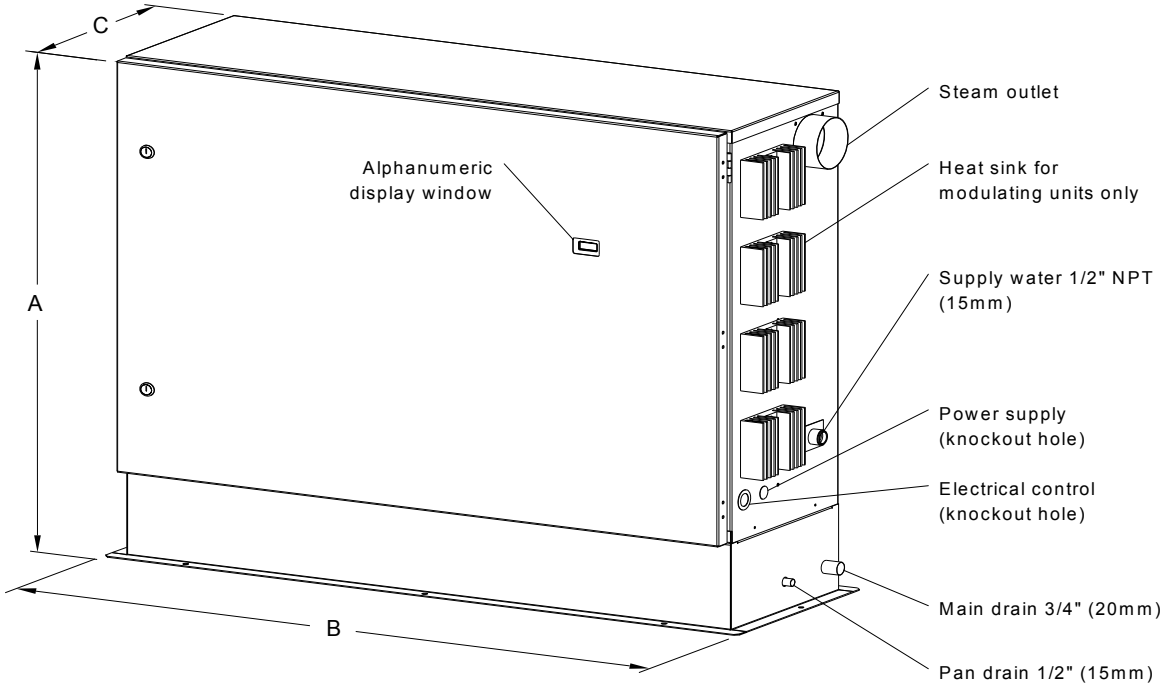

(Illus. 2a)

Model	Dimensions of the cabinet inch (mm)				
	A	B	C	Weight lb (kg)	
				Empty	Full of water
SK302	28.5 (724)	25.8 (655)	11.3 (287)	66 (30)	79 (36)
SK304					
SK306					
SK310	34.5 (876)	29.8 (757)	13.3 (338)	95 (43)	144 (65)
SK314					
SK320					
SK330					
SK340	34.5 (876)	40.8 (1036)	13.3 (338)	165 (75)	260 (118)
SK360					

2.3. Output and power consumption

Model	Steam	Consumption								Steam Output	
	Capacity lb/hr (kg/hr)	Power (KW)	Amperage (A)							Qty	Diameter inch (mm)
			240/1	208/1	208/3	480/1	480/3	600/1	600/3		
SK302	6 (2.7)	2	8.5	10	-	4.5	-	3.5	-	1	1 ⅜ (35)
SK304	12 (5.5)	4	17	19	11.5	8.5	5	7	4	1	1 ⅜ (35)
SK306	18 (8)	6	26	30	16.5	13	7.2	10.5	6	1	1 ⅜ (35)
SK310	30 (14)	10	-	-	28	-	12	-	10	1	1 ⅜ (35)
SK314	40 (19)	13.5	-	-	38	-	16.5	-	13.5	1	1 ⅜ (35)
SK320	60 (28)	20	-	-	*	-	25	-	20	2	1 ⅜ (35)
SK330	90 (41)	30	-	-	-	-	36	-	30	2	1 ⅜ (35)
SK340	120 (56)	40	-	-	*	-	50	-	40	2	2 ⅛ (54)
SK360	180 (82)	60	-	-	-	-	72	-	60	3	2 ⅛ (54)

***** Available, please consult factory.

Option:

- On modulating humidifier, the maximum steam output can be programmed with the function "LOCK ON" in Program mode.

WARNING (MODULATING HUMIDIFIER): MAXIMUM POWER OF THE ELECTRICAL INSTALLATION SHOULD BE IN ACCORDANCE WITH THE ABOVE TABLE, DO NOT TAKE ACCOUNT A POSSIBLE REDUCTION OF STEAM OUTPUT, DUE TO MODULATION.

3. Mechanical installation

3.1. General recommendations

- **CAUTION**: RISK OF ELECTRIC SHOCK. DISCONNECT THE APPLIANCE FROM THE ELECTRIC SUPPLY BEFORE TO PROCEED TO INSTALLATION.
- **IMPORTANT**: Mechanical installation should conform to local codes and regulations.
- Location: Plan a location easy to access in order to permit an easy inspection and servicing of the humidifier. Do not install humidifier where failure of the appliance could cause damage to the building structure or to costly equipment.
  This location should be well ventilated; the ambient temperature should not exceed 85°F (30°C).
- Typically, the total steam line length between the humidifier and the steam distributor depends on the steam line material type:
  - For flexible steam hose: the total steam line length should not exceed 16 feet (5 meters). For longer distances use insulated hard piping.
  - For insulated hard piping: the total steam line length should be determined by the humidifier capacity: one equivalent foot for each lb/h capacity of the humidifier (0,67m for each kg/h), with a maximum of 50 feet (15m). For longer steam line runs, consult factory.

3.2. Positioning

- The front panel and the right side (electrical compartment) should be accessible in order to permit the servicing.
  Leave a clearance of at least 48" (1,25m) to the front panel and 24" (0,6m) to the right side.
- The humidifier should be mounted at a minimum of 39" (1m) to 48" (1,2m) above floor level.
  Leave a clearance of at least 10" (0,25m) under the humidifier for installation of water supply, drain piping and electrical connections.

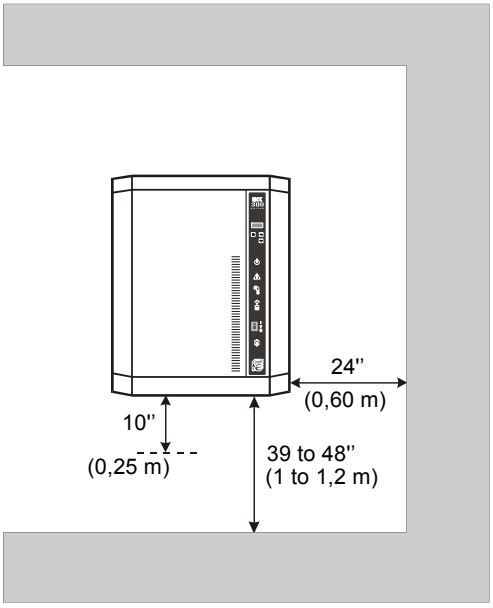

Positioning *(Illus. 3)*

3.3. Wall mounting

- Use the keyholes located on the back panel of the humidifier.
- Before to proceed to the wall mounting, take off the Evaporation chamber sub assembly (see section 12, Servicing).
- Check the solidity of the chosen support or wall (bricks, concrete, stud partition wall, etc) on which the humidifier will be mounted.
- Drill holes for the upper anchors (holes with eyelet) into the support or wall as per dimensions specified in the table (illus.4).
  The holes dimensions (diameter and depth) should by in accordance with the recommendations of the chosen anchors.
- Install then bolt anchors, if required.
- Screw-on the 2 or 3 upper screws (holes with eyelet) of a minimum diameter of #10 (6mm) (screws are not supplied).
  Leave a clearance between head screws and wall in order to permit the mounting of the humidifier.
- Use the keyholes located on the back panel of the humidifier.
- Hang on the humidifier to the 2 or 3 screws; it is preferable let the front door open during this operation.
  According to the size and weight of the humidifier, you may need the help of a second person to assist you.
- When the humidifier is positioned on the upper screws, tighten the screws to secure the humidifier.
- If applicable, install and secure lower screws.

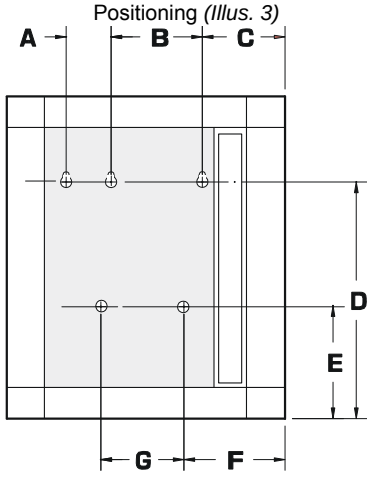

Front view *(Illus. 4)*

Model	Dimensions inches (mm)						
	A	B	C	D	E	F	G
SK302, SK304, SK306	-	8 (202)	5 3/16 (165)	19 ¾ (516)	-	-	-
SK310, SK314, SK320, SK330	-	10 (254)	8 (203)	24 ⅝ (625)	11 (276)	8 (203)	10 (254)
SK340, SK360	4 (102)	12 (305)	10 ½ (265)	27 ½ (698)	11 (276)	22 43/64 (576)	-

3.4. Weather proof enclosure unit positioning and mounting

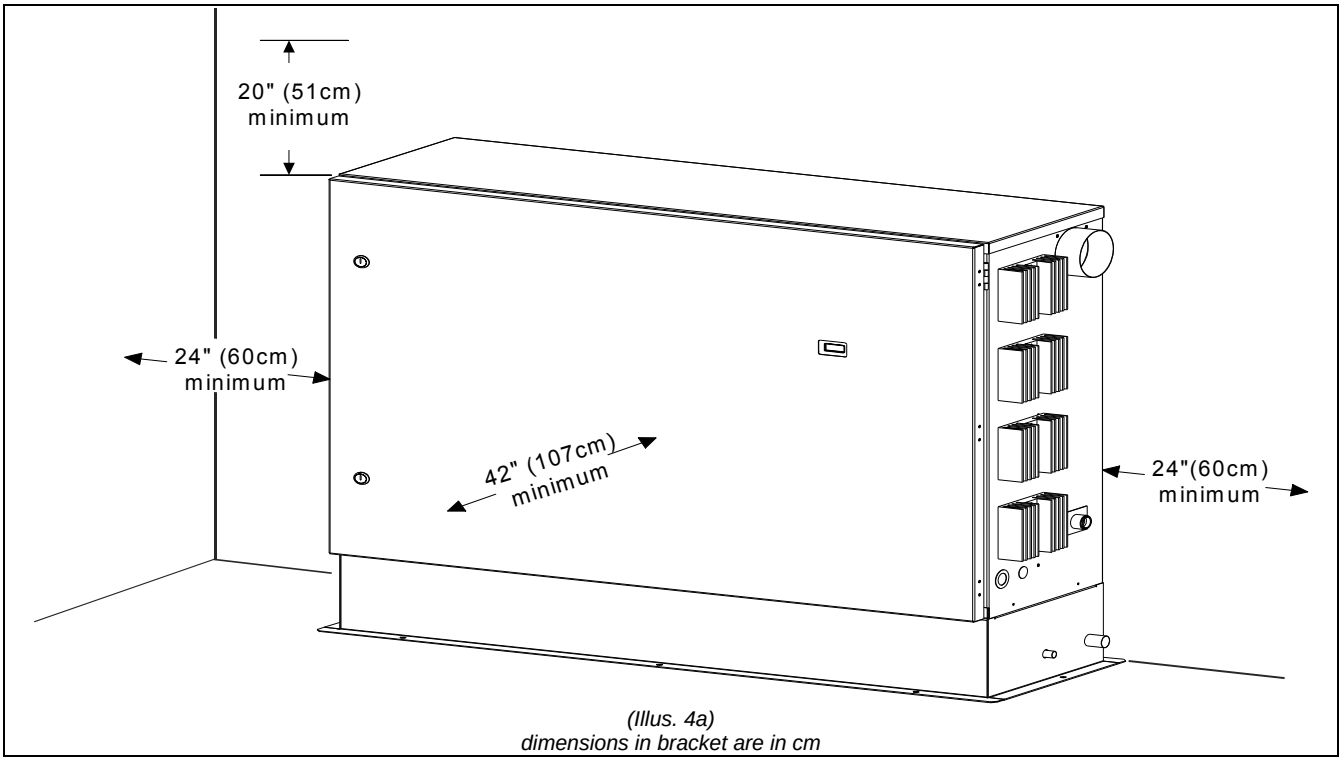

(Illus. 4a)
dimensions in bracket are in cm

General Recommendations

The humidifier should be installed in an easily accessible location to allow proper access for inspection and servicing of the humidifier. The unit should never be installed in a location where unusual malfunction of the unit can cause damage to the building structure or to costly equipment.

Minimum Clearances

Minimum clearances are :

- Top, 20'' (51 cm) minimum
- Both sides, 24'' (60 cm) minimum
- Front, 42'' (107 cm) minimum

Note: Above minimum clearances are indicated for inspection and servicing access.

The humidifier is designed to be installed directly on the floor/roof or a curb. Provide a level, solid foundation for the humidifier.
Ensure that the floor/roof beneath the humidifier is water proof to withstand any water spillage during servicing or if a problem occurs.

Attach securely and safely the SK enclosure.

4. Steam dispersion system selection and positioning

4.1. Steam dispersion system selection

In order to prevent the accumulation of condensation in air ducts, NEP has designed 4 basic configurations of steam distribution to provide the client with the most economical solution for any particular application.

4.1.1. S.A.M. (steam absorption manifold) Horizontal duct

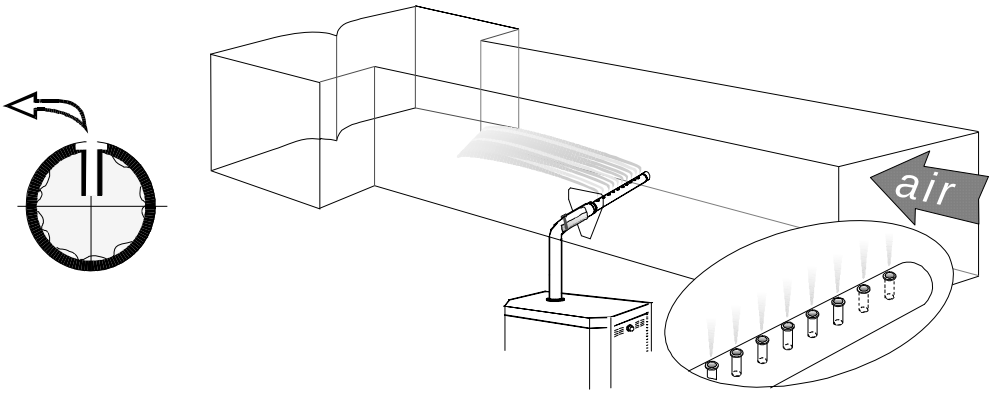

The SAM is to be installed where absorption distances are short, less than 5 feet (1500mm), and/or low duct temperatures are in effect.

(Illus. 5)

4.1.2. S.A.M.E2 (steam absorption manifold) Horizontal duct

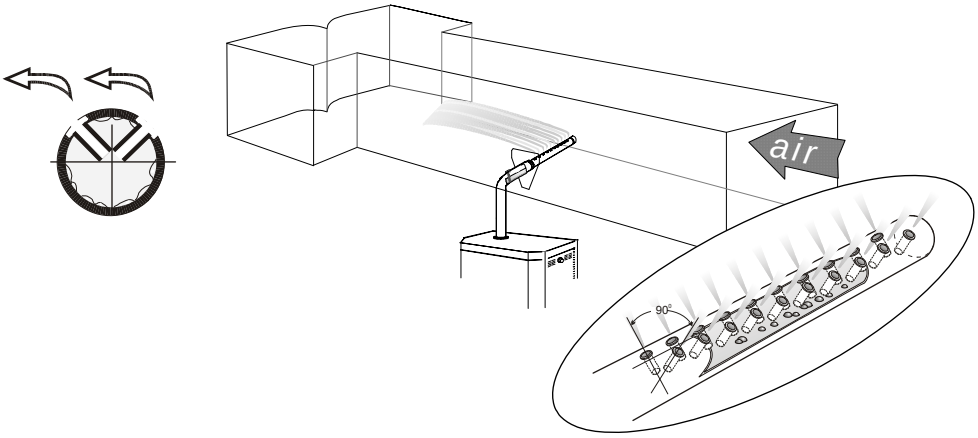

The SAME2 is to be installed where absorption distances are short, less than 5 feet (1500mm) and/or low duct temperatures are in effect. SAME2 are used in applications with restricted duct dimensions.

(Illus. 6)

4.1.3. S.A.M. or S.A.M.E2 (steam absorption manifold) Vertical duct

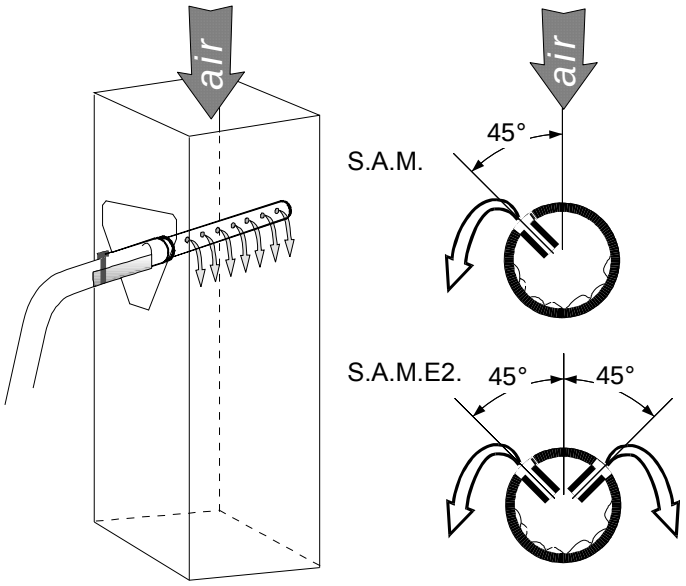

(Illus. 7)

SAM or SAME2 for vertical ducts are used where the absorption distances are normal and the client requires an economical as well as an efficient solution.

4.1.4. Multi-Steam system

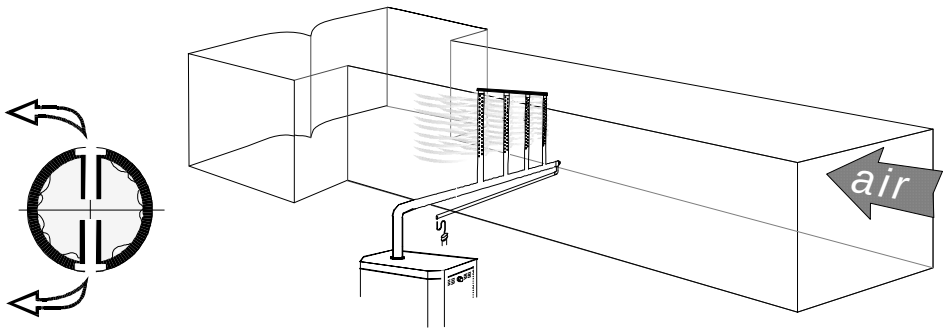

(Illus.8)

The Multi-Steam system is to be installed in critical locations in air handling systems, particularly where absorption distances are very short, less than 3 feet (900mm), or low air duct temperatures are in effect.

The Multi-Steam is custom made to the dimensions of duct or AHU.

Instructions to install Multi-Steam system are described in a specific installation instructions manual enclosed with the Multi-Steam system.

4.2. Positionning of S.A.M or S.A.M.E2

4.2.1. Duct mounting

Steam manifold should be mounted and secured through the side of the air handling unit or duct. Provision should be made for safe accessibility, ideally with an observation light and window.
Check that the construction of the duct wall is suitable enough to support the steam pipe for the duration of the installation life.
Dimension of hole size in the duct must be as per table below:

Steam manifold Ø	*Hole size ØA*
1 ⅜'' (35mm)	2'' (51mm)
2 ⅛'' (51mm)	3'' (78mm)

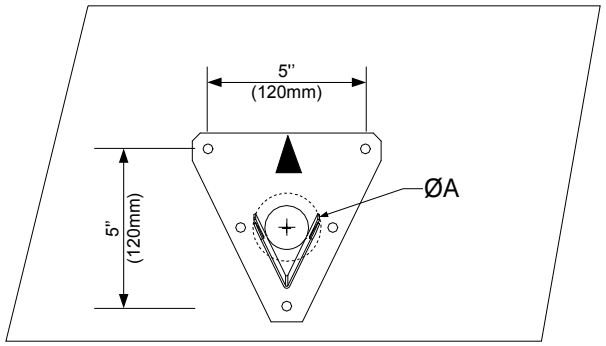

(Illus. 9)

WARNING: Risk of condensing. Ensure that the minimum distance of the end of the manifold is at least 4'' (102mm) from the top of the duct.

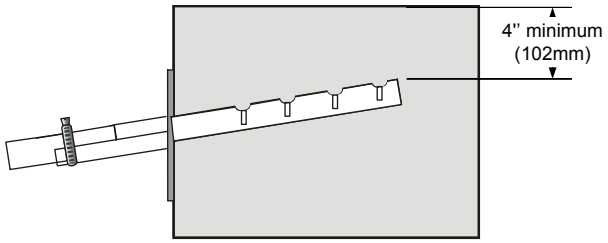

Minimum distance *(Illus. 10)*

4.2.2. Recommendations for SAM distribution pipes

Model	Maximum Capacity		Outlet		Distribution pipes		Maximum static pressure	
	(lb/hr)	(kg/hr)	Qty	Diameter In (mm)	Minimum length in. (mm)	Maximum length in. (mm)	in. of water	(Pa)
SK302	6	2.7	1	1 ⅜ (35)	12 (300)	24 (600)	5	1245
SK304	12	5.5						
SK306	18	8						
SK310	30	14			24 (600)	48 (1200)		
SK314	40	19						
SK320	60	28	2		32 (750)	64 (1500)		
SK330	90	41						
SK340	120	56		2 ⅛ (51)				
SK360	180	82	3					

Note: For higher static pressure, please contact the manufacturer.

4.2.3. Placement of steam pipe in horizontal duct

1 ⅜'' (35mm) diameter pipe

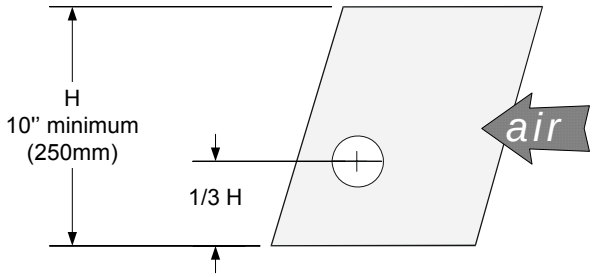

1 pipe *(Illus. 11)*

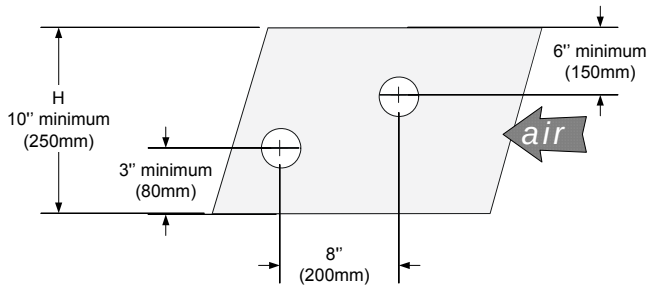

2 pipes *(Illus. 12)*

2 ⅛'' (51mm) diameter pipe

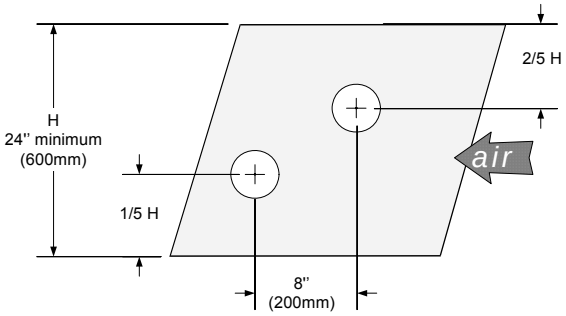

2 pipes *(Illus. 13)*

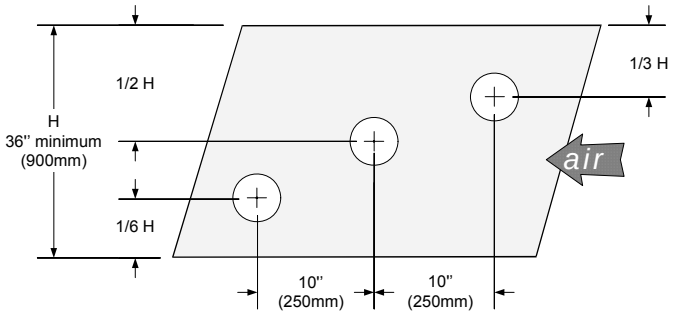

3 pipes *(Illus. 14)*

Note: 2 ⅛'' (51mm) steam pipe must be supported on the end by appropriate duct hanger or strap (supplied by others).

4.2.4. Placement of steam pipe in vertical duct

Eyelet orientation

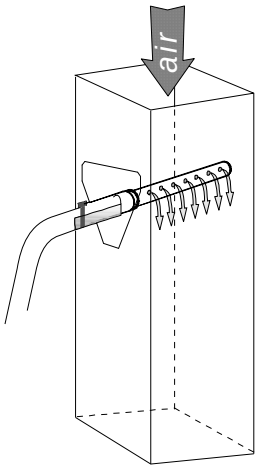

3D view *(Illus. 15)*

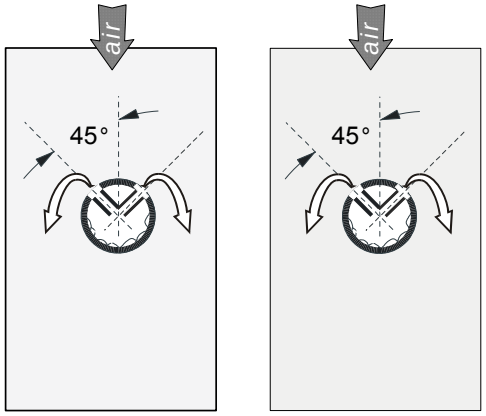

(Illus. 16)

1 ⅜'' (35mm) diameter pipe

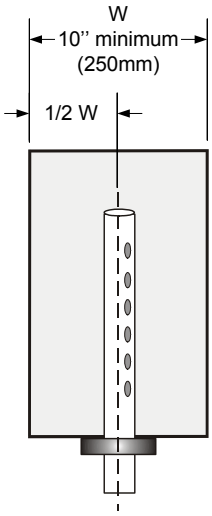

1 pipe *(Illus. 17)*

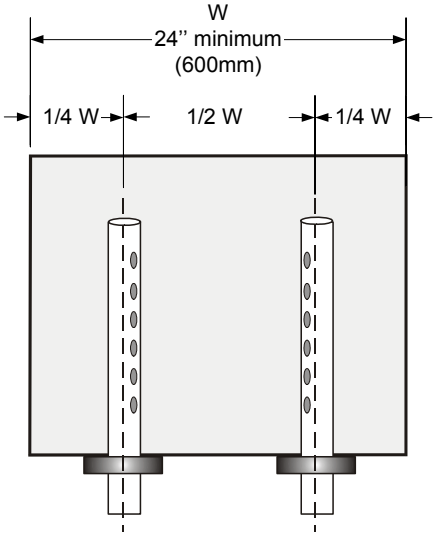

2 pipes *(Illus. 18)*

2 ⅛'' (51mm) diameter pipe

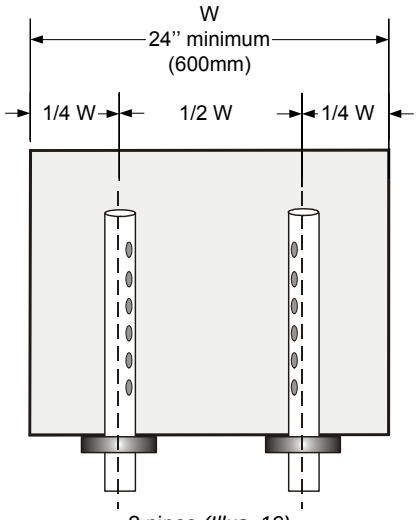

2 pipes *(Illus. 19)*

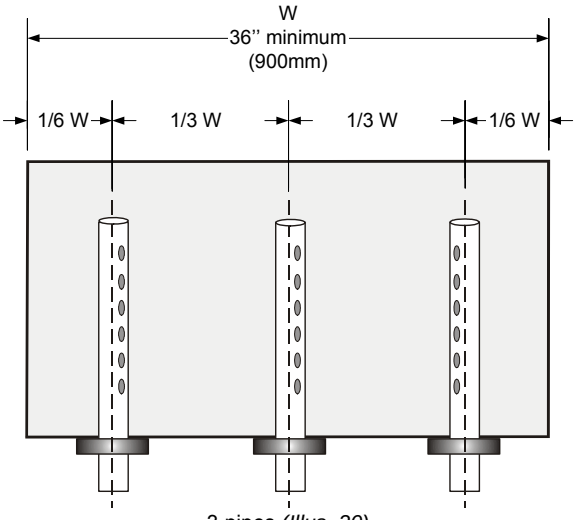

3 pipes *(Illus. 20)*

5. Steam output connection

5.1. Typical installation

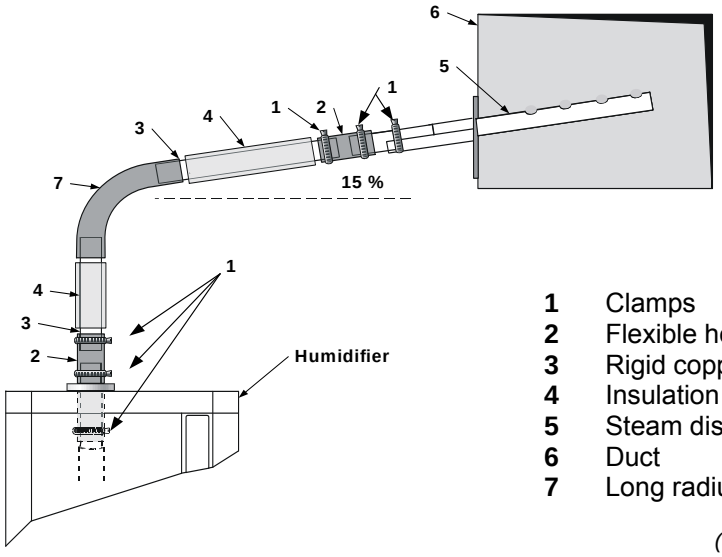

1 Clamps
2 Flexible hose
3 Rigid copper pipe
4 Insulation
5 Steam distribution manifold
6 Duct
7 Long radius copper pipe

(Illus. 21)

5.2. General recommendations

Please follow these general rules of installation in order to avoid any static pressure inside distribution pipes and into the humidifier evaporation chamber, and also to avoid any condensation accumulation.

a) **The slope of the steam hose (rigid or flexible) should not be less than 15%** (7 horizontal length for 1 vertical length) in order to ensure continuous drainage of condensation back to humidifier or to steam trap.
b) **Total length of the flexible steam hose should not exceed 16feet (5 meters).** Longer runs will result in added condensation losses. Whenever possible, use insulated copper piping. Flexible steam hose should be used for short runs (up to 16ft or 5m) or for interconnecting between the rigid pipes.
c) **Whenever using rigid copper, these ones should be insulated to diminish condensation build up.**

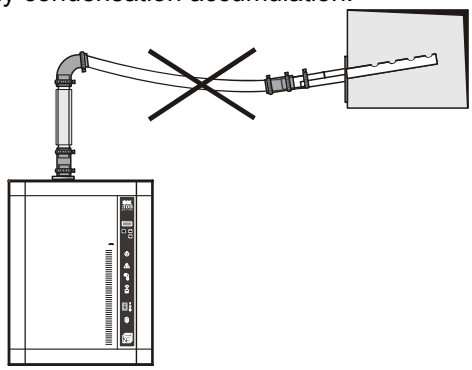

Incorrect installation
(Illus. 22)

5.3. Installation of "S" traps on the steam line

The lowest point of any steam hose or rigid pipe must be the humidifier. If necessary a steam separator (S trap) should be installed higher than the static pressure of the system by at least 2" (51mm).

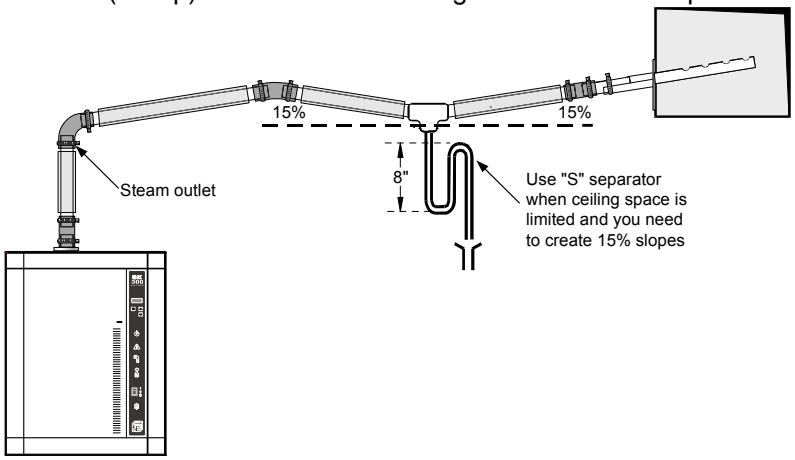

(Illus. 23)

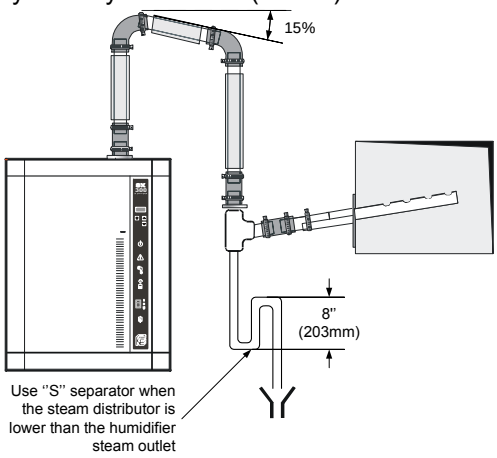

(Illus. 24)

5.4. Position of steam output

Model	Dimensions inches (mm)			
Small Cabinet	**I**	**J**		
SK302 SK304 SK306	4 5/16 (110)	4 13/16 (122)		

Small Cabinet
(SK302-304-306)

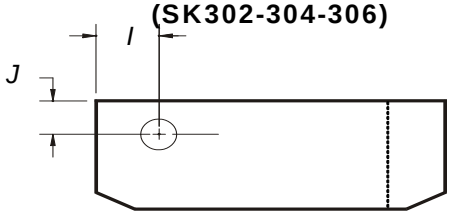

Medium Cabinet	K	L	M	
SK310 SK314	-	4 (102)	5 5/8 (143)	
SK320 SK330	5 9/32 (134)	4 (102)	5 5/8 (143)	

Medium Cabinet
(SK310-314)

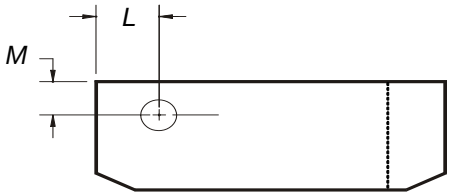

Medium Cabinet
(SK320-330)

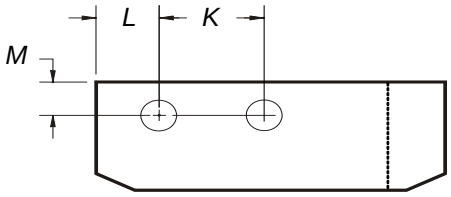

Large Cabinet	N	O	P	Q
SK340 SK360	7 (179)	7 (179)	5 3/16 (132)	5 11/16 (144)

Large Cabinet
(SK340)

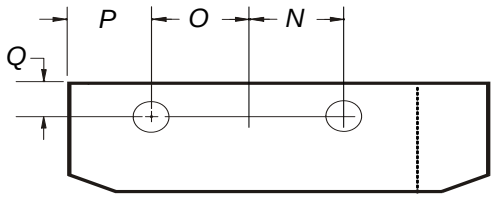

Large Cabinet
(SK360)

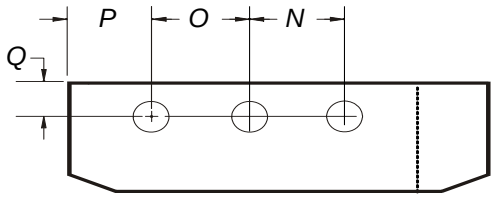

(Illus. 25)

5.5. Installation of humidifier with Space Distribution Unit (SDU)

- The SDU should be installed in an environment where the air is relatively clean. This will avoid the blower from getting clough with dust.
- The humidifier should be mounted such that the SDU fan section is at least 78" (2m) above the floor.
- A minimum clearance of 18" (0.45m) from the ceiling should be allocated to avoid ceiling and wall condensation.
  If additional ventilation is not present, the fan should have a clearance from the ceiling of at least 54" (1.35m). Proper ventilation must be observed to avoid ceiling and wall condensation.

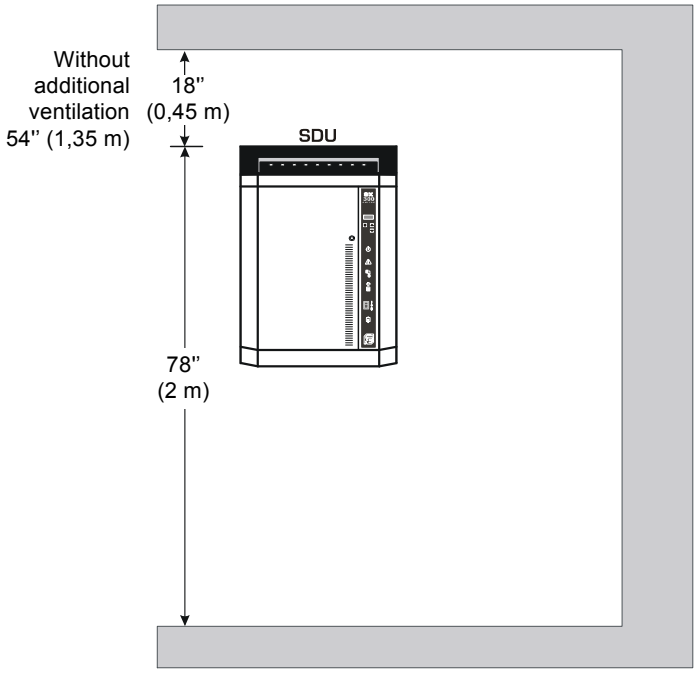

SDU mounted on humidifier *(Illus. 26)*

SDU remote installation:

- The SDU can be in a different location from the humidifier (remote SDU). Please follow the piping recommendations (section 5.2).
- Mount the SDU to the wall on brackets (not supplied), do not drill mounting holes thru the cabinet of the SDU.
- Connect the steam hose(s) to the bottom inlet(s) of the SDU to the top of the steam outlet(s) of the humidifier. Secure the hose(s) with the supplied hose clamp.
- Connect the condensate hose to the bottom of the SDU to an open drain.
- Connect the electrical wires from the SDU to the top of the humidifier. Field wiring must conform to local codes.

The fan of the SDU will operate for a period of four minutes after steam production has stopped to prevent condensation.

Avoid any obstruction of the ventilation openings on top of the SDU.

Maintenance of the SDU:

- Clean the blower if there is an accumulation of dust.

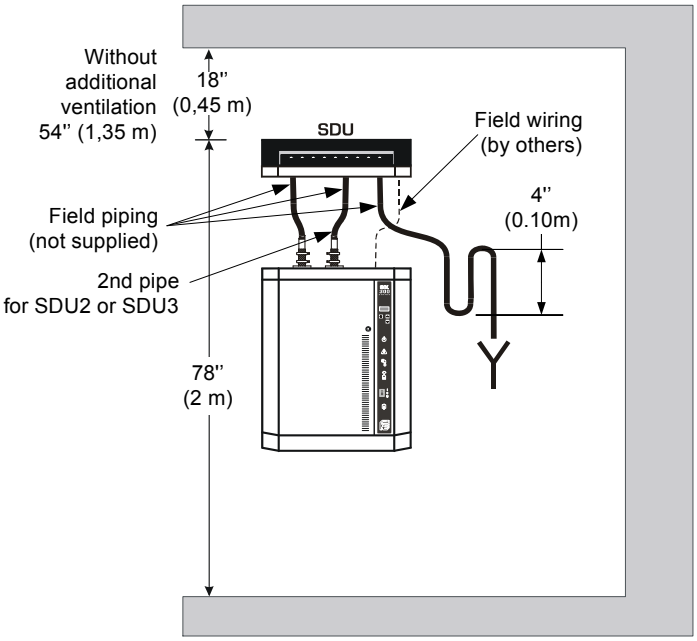

SDU remote installation *(Illus. 27)*

6. Plumbing connection

- **CAUTION:** Water supply installation should conform to local codes and regulations. Any installation work must be carried out by suitably qualified personnel.
- The operation of SK300 series humidifier is independent of variable water conditions, with soft or hard water. Therefore, for normal operation, no pre-treatment of water is necessary.

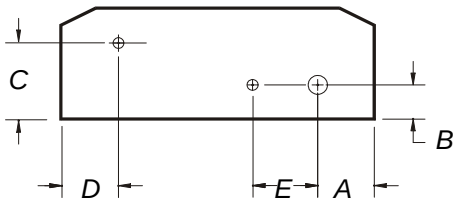

Bottom view *(Illus. 28)*

Model	Dimensions inches (mm)				
	A	B	C	D	E
SK302 SK304 SK306	6 ½ (165)	2 (51)	9 ⅛ (232)	4 ⅛ (105)	1 ¾ (44)
SK310 SK314 SK320 SK330	7 ¼ (184)	1 ¾ (44)	9 ¾ (248)	4 ⅛ (105)	1 ¾ (44)
SK340 SK360	7 (179)	1 ¾ (44)	9 ¾ (248)	4 ⅛ (105)	1 ¾ (44)

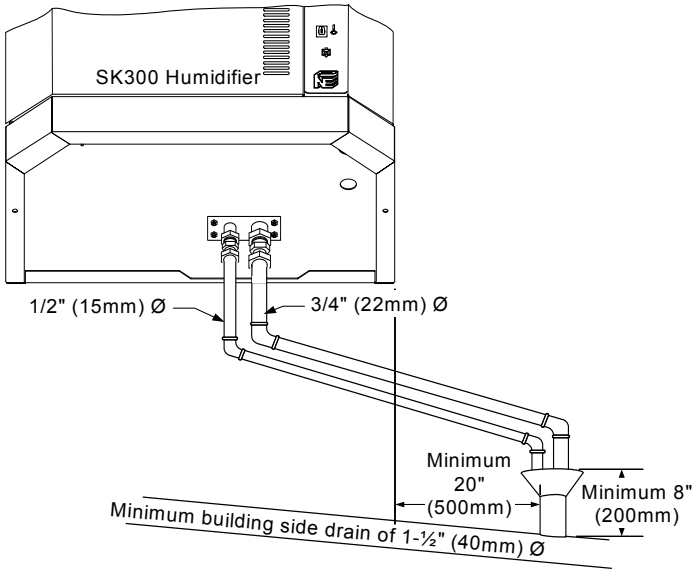

(Illus. 29)

6.1. Water supply

- Water inlet specifications:
  - ✓ Inlet water pressure: 10 to 70 psig (0,7 to 4,8 bars)
  - ✓ Maximum temperature: 85°F (30°C) maximum
  - ✓ 3/8" standard copper water line connection
- A shut off valve (not supplied) should be installed in the water supply line to the humidifier, close to the humidifier to facilitate servicing.
- It is recommended to install a standard water strainer in the water supply line.

Please follow the steps described below:

- Connect 3/8" copper pipe to the 3/8" braided hose (supplied).
- Finger tighten the swivel top 3/4" fitting to the male threaded part of the valve.
  CAUTION: RISK OF DAMAGE TO THE VALVE. DO NOT USE WRENCH TO TIGHEN SWIVEL.

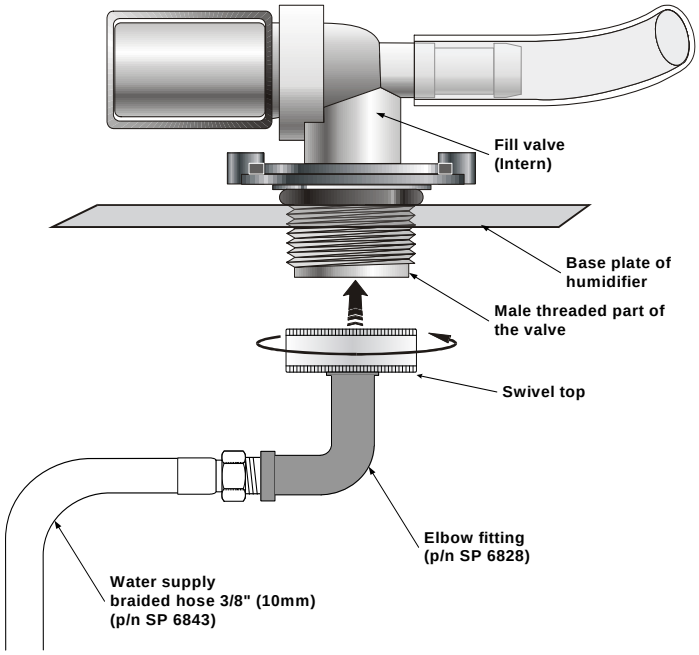

(Illus. 30)

6.2. Drain connection

- **CAUTION:** Water drain installation should conform to local codes and regulations. Any installation work must be carried out by suitably qualified personnel.
- Drain connection specification:
  - ✓ Evaporation chamber water drain temperature: 140°F (60°C).
  - ✓ Standard hydraulic compression fittings: a ¾" (evaporation chamber drain) and a ½" (Pan drain).
- 2 hydraulic pipes located under the humidifier (see Illus. 29) must be connected to the drain pipe.
- **Use standard copper hydraulic pipes ¾" and ½".**
- Ensure that the drain pipe dimension is sufficient, especially if more than one humidifier is evacuating into the same drain line.

6.3. Weather proof enclosure plumbing connection

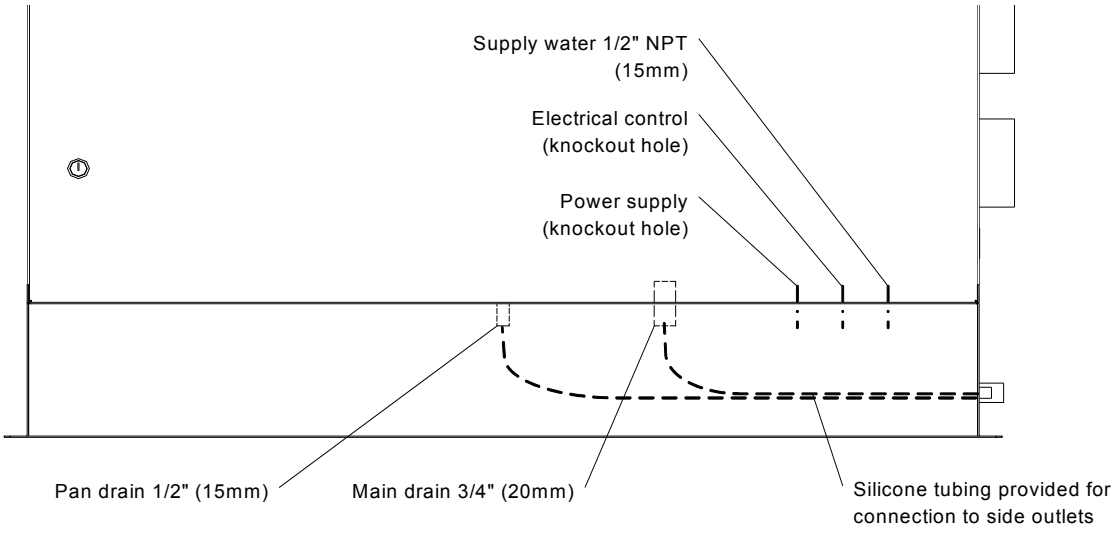

(Illus. 30a - Front view)

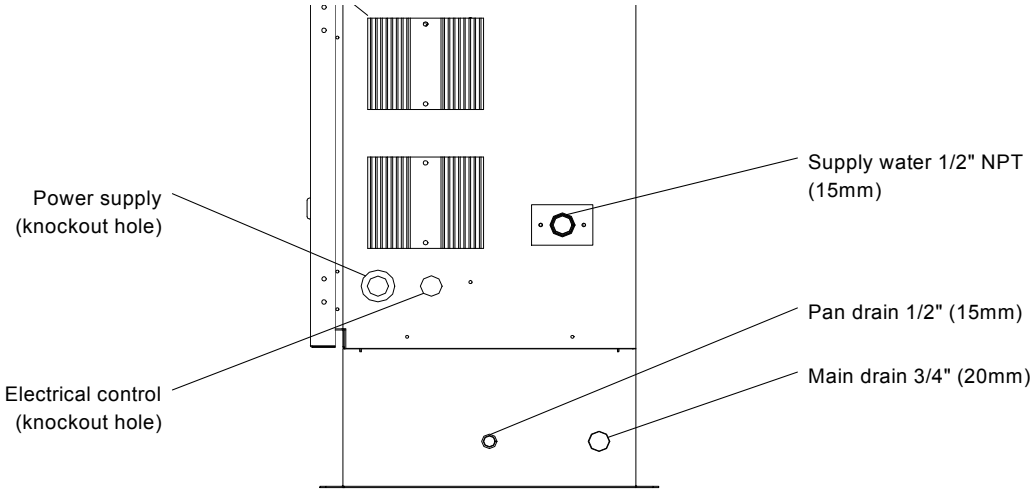

(Illus. 30b - Side view)

7. Power supply connections

- **CAUTION**: RISK OF ELECTRIC CHOC. DISCONNECT THE HUMIDIFIER FROM THE ELECTRIC SUPPLY BEFORE TO PROCEED TO THE CONNECTION.
- **WARNING:** RISK OF FIRE. Do not interchange the power terminal block designated L1, L2 and L3 with Low voltage terminal block designated 1, 2 and 3.
- The wiring to the Humidifier should be done by a qualified electrician, and conforming to the procedure, regulation and local codes.
- Use only coppers conductors.
- An external over current protection and disconnect circuit breaker should be installed on the supply adjacent to the humidifier.
- A knock out (not supply) should be installed at the bottom of the electrical compartment of the humidifier for strain relief of the supply cable.
- Ensure that the size of the wire conductors is appropriate for the current supplied.
- Ensure that each terminal connection is properly secured.
- The ground conductor should be equipped with ring terminal and should be connected directly to the electrical panel on the indicated location.

1 Phase Connection

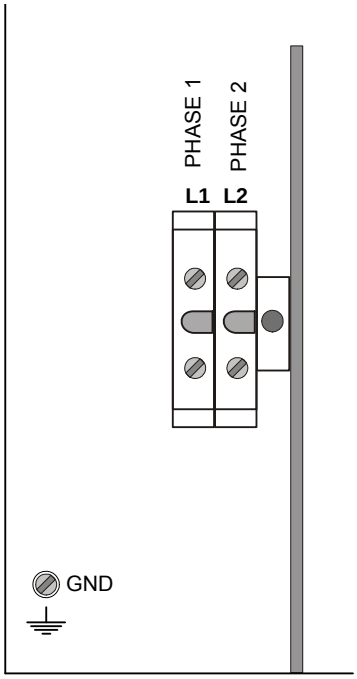

(Illus. 31)

3 Phases Connection

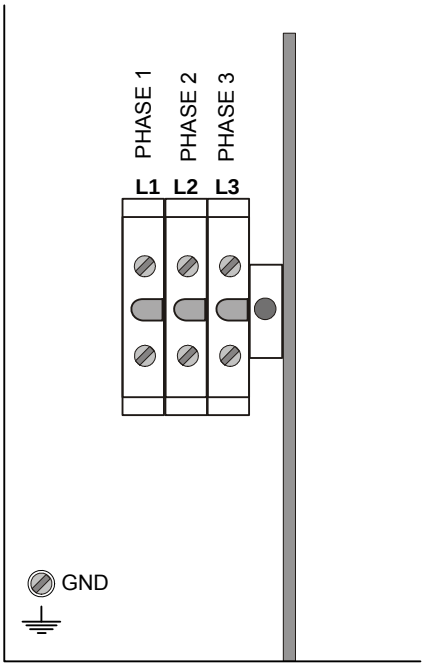

(Illus. 32)

8. Low voltage control connections

8.1. "ON/OFF" Humidifier

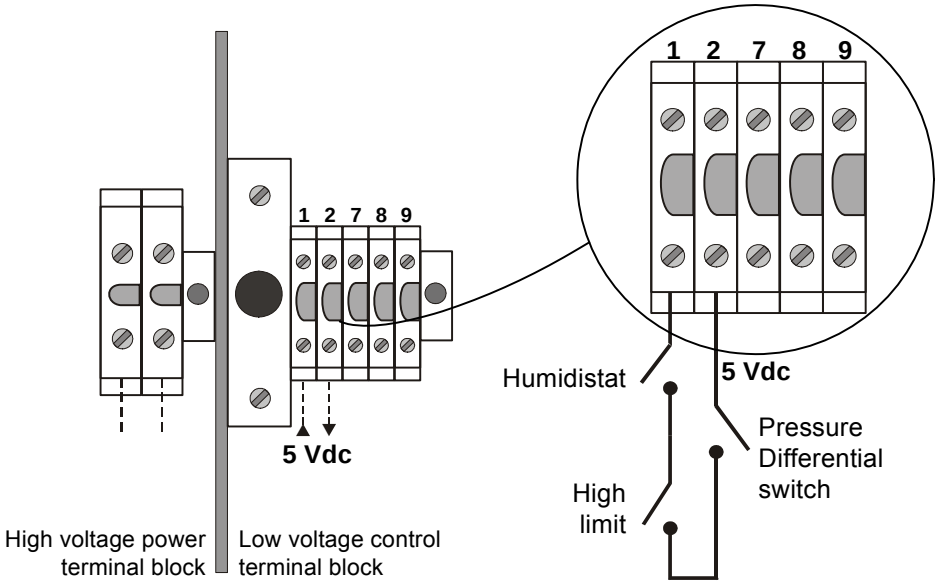

(Illus. 33)

8.2. Modulating Humidifier

8.2.1. Humidity control by humidistat (external mode)

Connection to HRO20 humidistat or HRO20 with remote humidity sensor (SHR10 or SHC80).

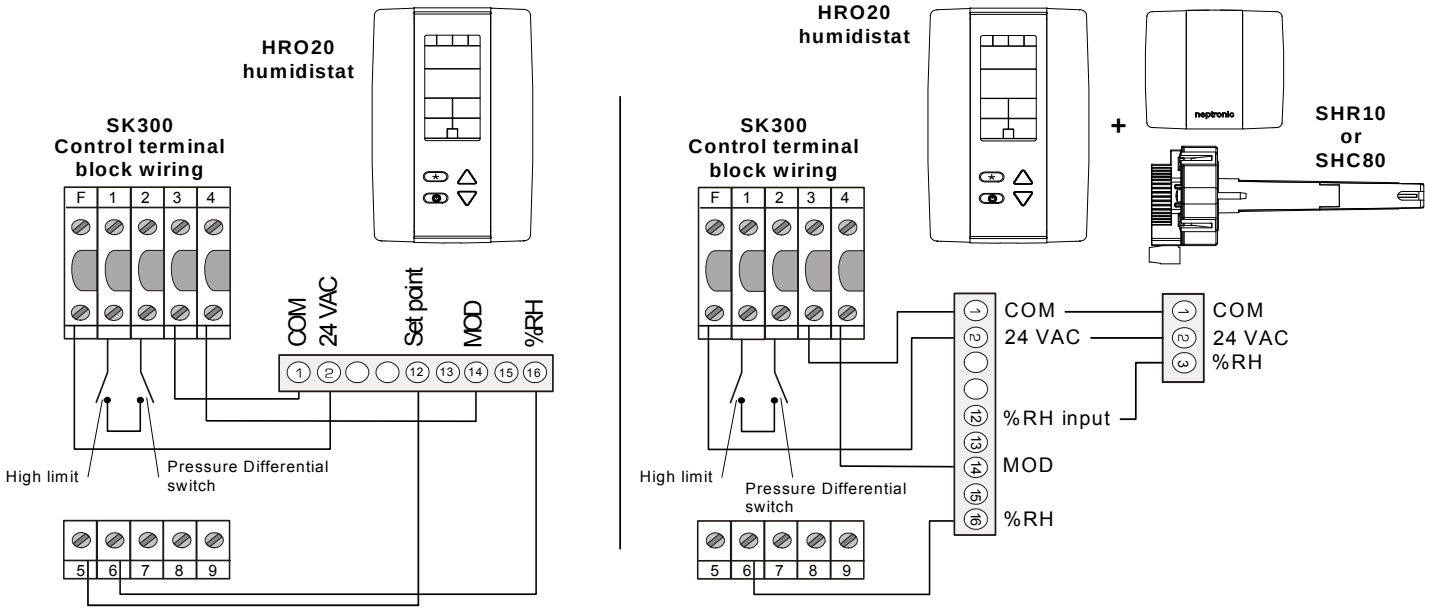

(Illus. 34)

8.2.2. Humidity control by humidifier (internal mode)

Humidity controlled by humidifier, using SHR10 or SHC80 as space sensor.

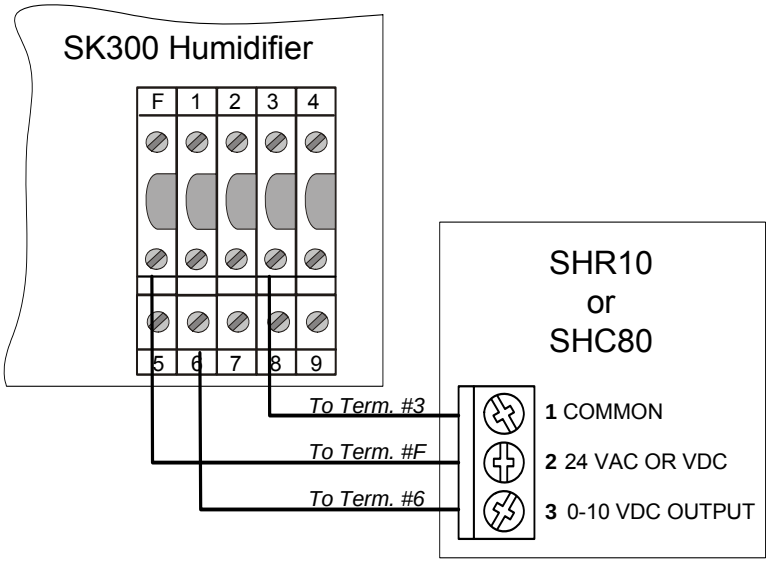

(Illus. 35)

VAV system with humidity controlled by humidifier, using SHC80 as Hi limit duct sensor and SHR10 or SHC80 as space sensor.

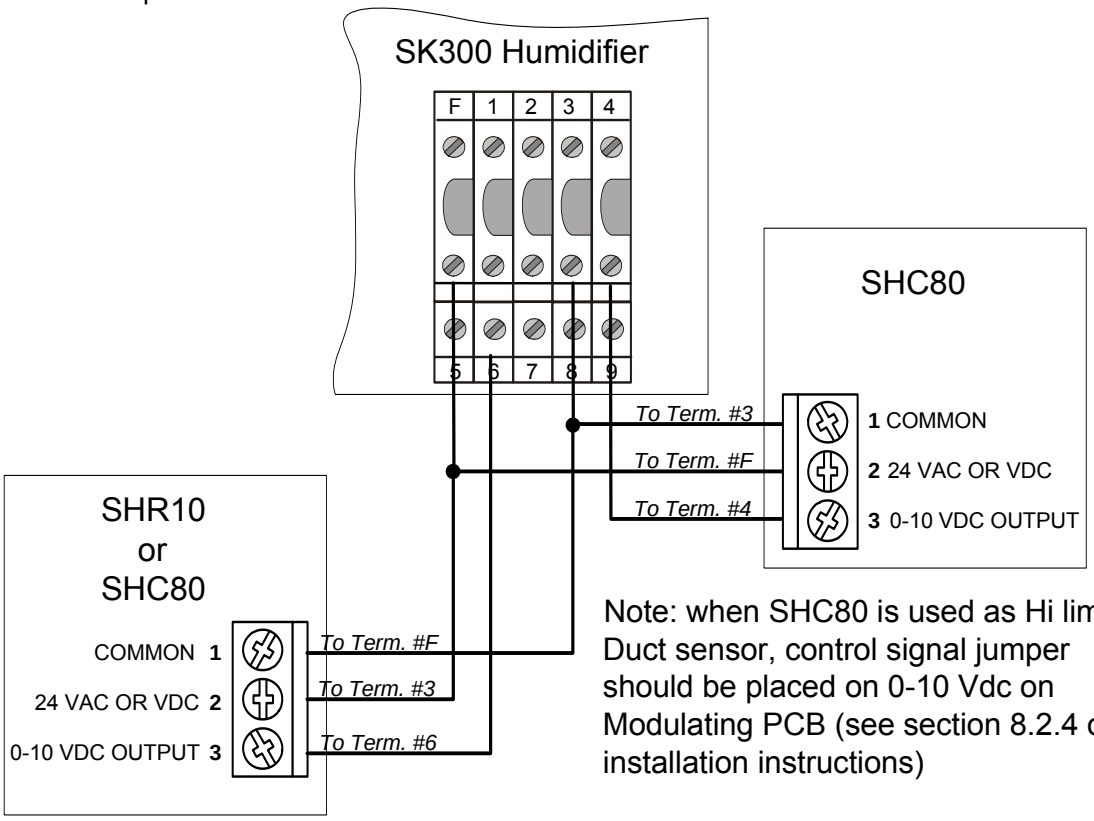

Note: when SHC80 is used as Hi limit Duct sensor, control signal jumper should be placed on 0-10 Vdc on Modulating PCB (see section 8.2.4 of installation instructions)

(Illus. 36)

8.2.3. Humidity Signals (internal mode)

Terminal Block | ***Modulating Printed Circuit Board***

Humidity signal 0-10 Vdc

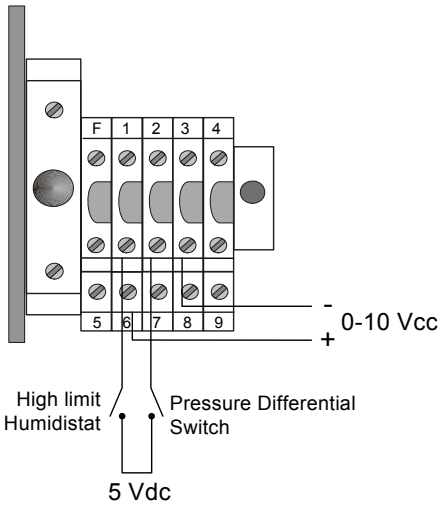

(Illus. 37)

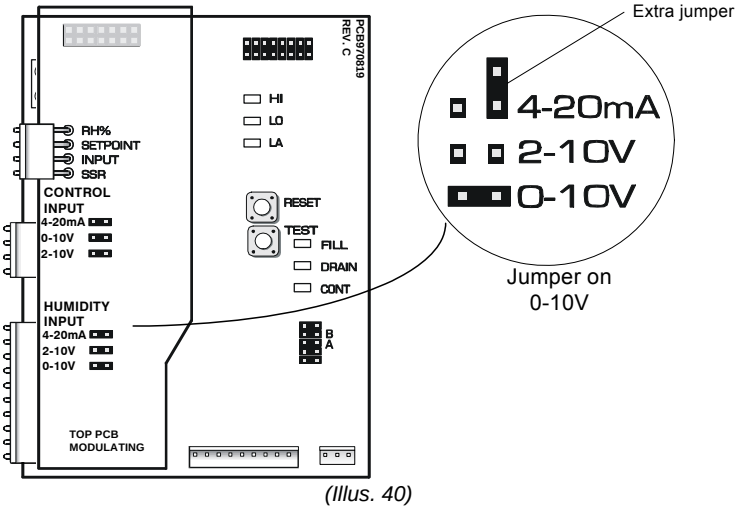

(Illus. 40)

Humidity signal 2-10 Vdc

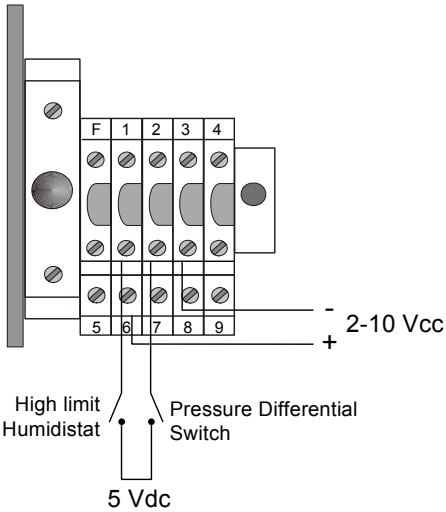

(Illus. 38)

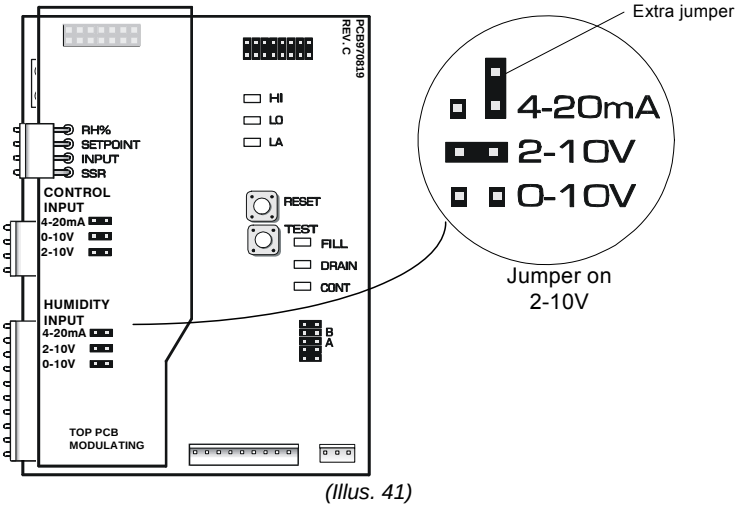

(Illus. 41)

Humidity signal 4-20 mA

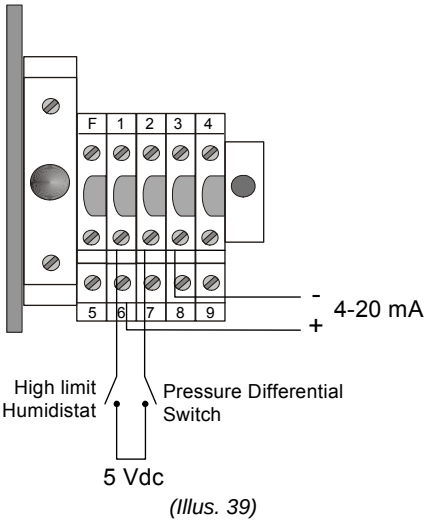

(Illus. 39)

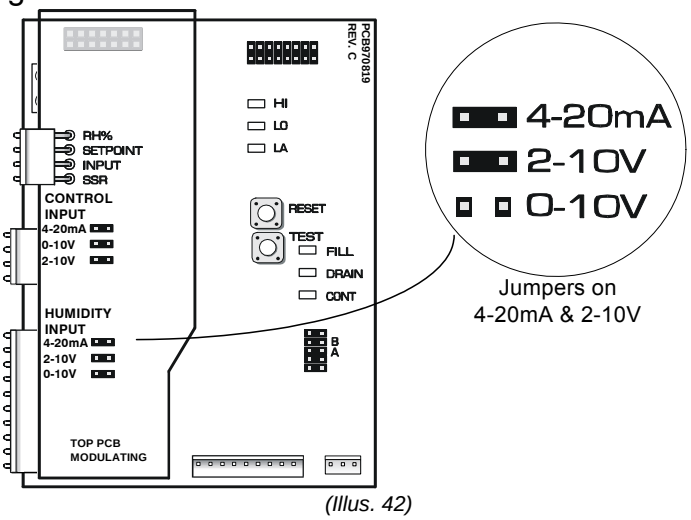

(Illus. 42)

8.2.4. Control Signals

Terminal Block | ***Modulating Printed Circuit Board***

Control signal 0-10 Vdc

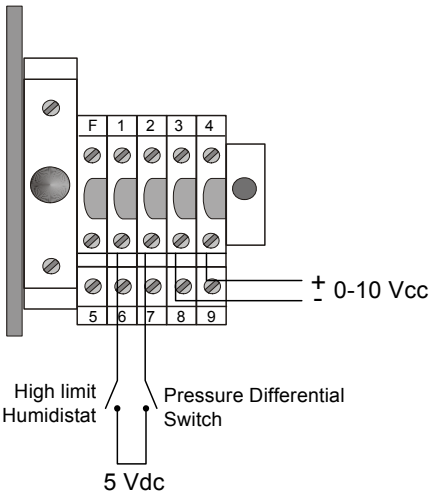

(Illus. 43)

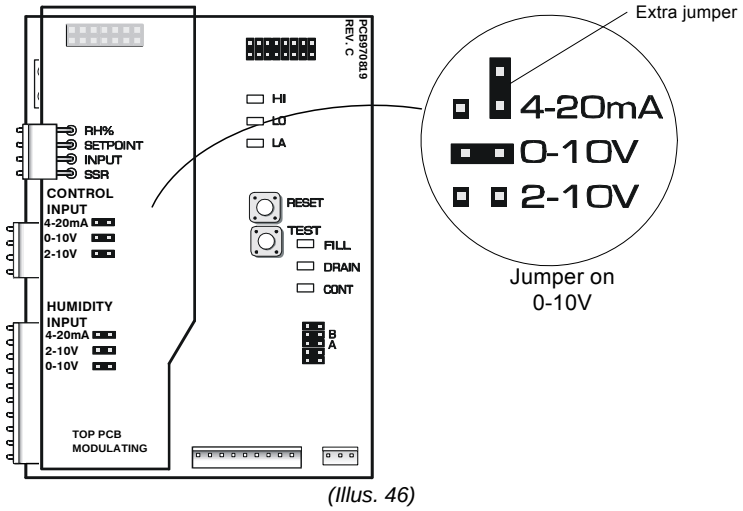

(Illus. 46)

Control signal 2-10 Vdc

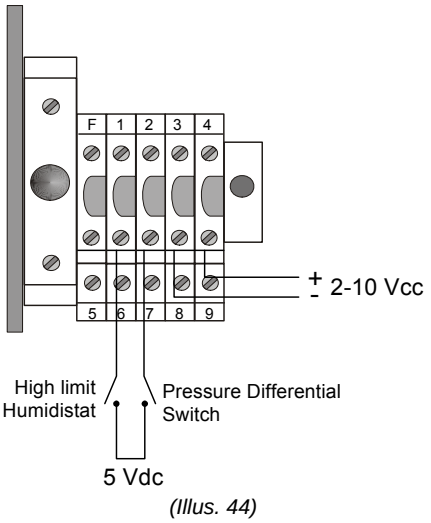

(Illus. 44)

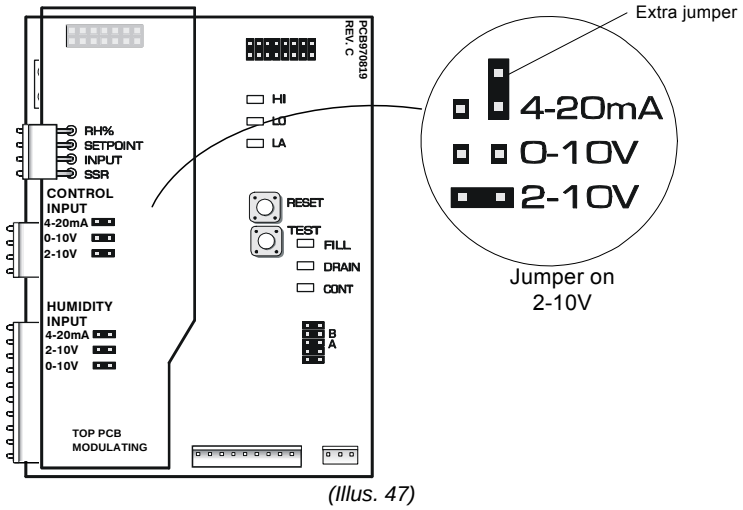

(Illus. 47)

Control signal 4-20 mA

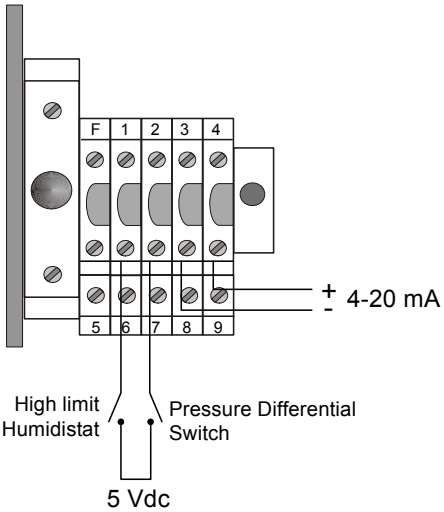

(Illus. 45)

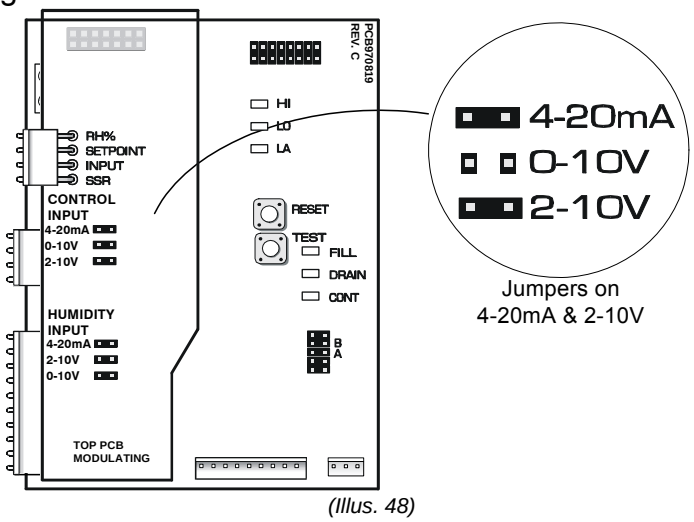

(Illus. 48)

8.3. Common Alarm Connections

A volt free contact is provided in the form of both a normally open and normally closed contact that will switch in the event of an alarm on the SK300 humidifier.

- Wherever possible it is recommended to use the normally closed contact. This contact will open in the event of a humidifier fault.
- These contacts should be used to switch a low voltage, ideally **24V**, with a switching current of no more than **3 Amps**.

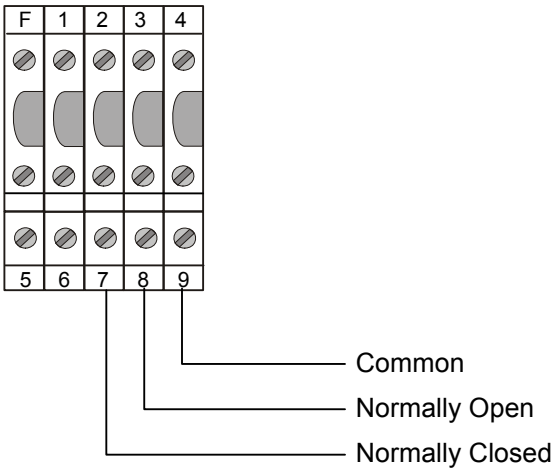

(Illus. 49)

8.4. Controls Placement (steam dispersed into a duct or AHU)

Typical humidifier control system should include along with the humidifier:

- A wall or return duct humidistat
- A high limit duct humidistat,
- An air proving switch.

Placement of these devices is critical to proper operation of the overall system.

- The return duct humidistat must always be located before any outside air intake, in order to ensure accurate sensing of the air from the humidified space.
- Alternatively a room humidistat can be used. The room humidistat should be located on an inside wall or column. It should not be be near any discharge air from supply ducts or sources of heat or cold.
- The airflow switch must be positioned to accurately open on a loss of air flow, to prevent the humidifier from running when there is no air to absorb humidity.
- The high limit humidistat must be positioned far enough - 6’ minimum (1.8m) - downstream of the steam dispersion manifold(s) to prevent it from getting wet, but still allows it to accurately prevent overhumidification of the duct that could result in condensation.

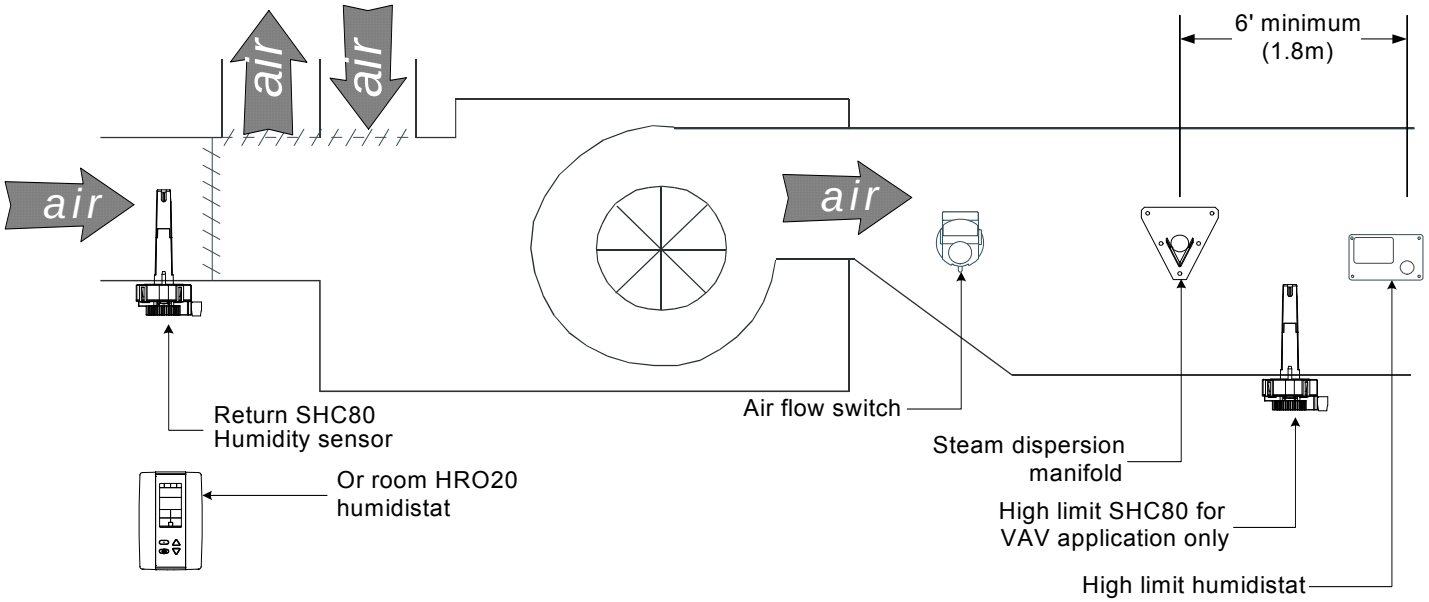

(Illus. 50)

9. Front panel display features

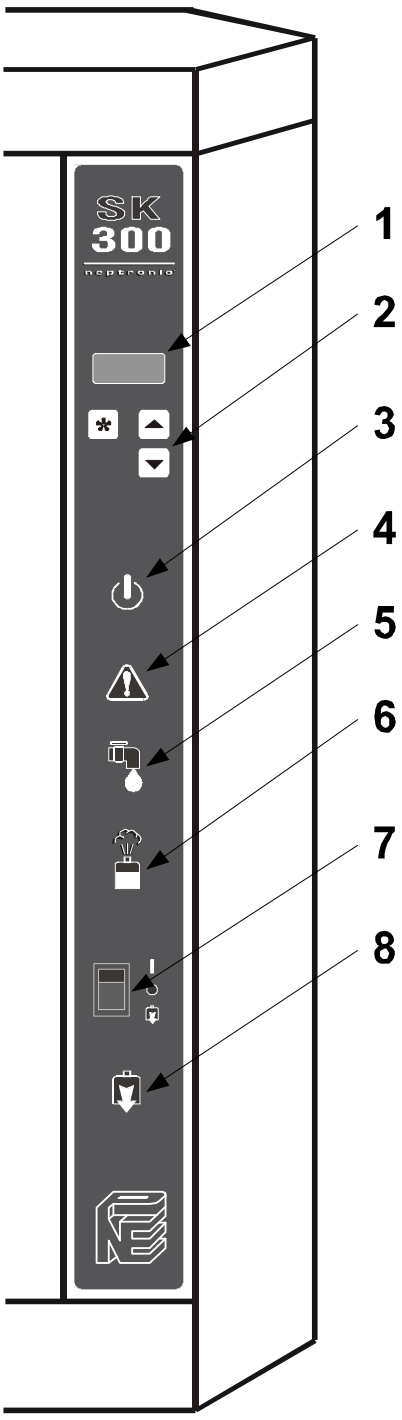

(Illus. 51)

1 Alphanumeric Display:
Indicates all operation parameters and the error messages (see section 14 – Trouble shooting).

2 Push button ✱, ▲ and ▼

✱	M button: Used to access into program mode.
▲ ▼	Up and Down button: Used to increase or decrease the controlled parameters of the humidifier.

3 "POWER" indicator

☼	The humidifier is powered by electricity and the switch is at the AUTO position.
O	The humidifier is disconnected from the power supply.

4 "CHECK" indicator

☼	The "CHECK" indication is normally off. It will go on as a warning against abnormal conditions of operation. For details consult the Alphanumeric Display (see section 9.1.3 Diagnostic mode).
☼ *blinking*	Maintenance is required. The Running hours have exceeded the Service hours. (see section 12 – Service).
O	No abnormal conditions of operation.

5 "FILL" indicator

☼	Indication that the water supply (fill) valve is open.
O	Indication that the water supply (fill) valve is closed.

6 "STEAM" indicator

☼	ON/OFF model, the STEAM indicator lights when the contactor is closed and steam is being generated.
☼ *blinking*	Modulating model, the STEAM indicator blinks ON and OFF in proportion to the percentage of steam output the humidifier is generating. (The proportion is displayed on the alphanumeric display (1)). For 100% the indicator will be lit with no blink.
O	There is no steam being produced.

7 Switch "AUTO/OFF/DRAIN"

AUTO	Position AUTO (I): Humidifier will generate steam based on demand from the humidistat.
OFF	Position OFF (O): Humidifier will shut off.
DRAIN	Position DRAIN: Humidifier will stop operating and the evaporation chamber will drain the water out. This will be done tipically at regular service.

8 Indicator "DRAIN"

☼	Drain pump is on, whether as a result of an automatic drain cycle or because the front panel switch is manually set to DRAIN.
O	Drain pump is off.

9.1. Description display modes

9.1.1. "OFF" Mode

When the rocker switch is in the "OFF" position, the display shows the model of the humidifier and the program version number.

(Illus. 52)

9.1.2. Scroll Mode

When the rocker switch is in the auto position, the display scrolls the following information every 6 seconds:

Display	*Description*	*Comment*
RH 25% DCT 68%	Display Space and Duct Relative Humidity readings.	Only on modulating humidifiers (suffix M). If no High limit Duct sensor is installed second line is left blank
lb/hr 30	Quantity of steam produced by the humidifier	I.e.: The actual output of the humidifier at that moment is 30 lb/hr.
ALARM LEVEL	Low water level.	Below this water level, the humidifier shuts off and the water supply valve is activated until sufficient level is reached.
CONTROL LEVEL	Water level is controlled	The water supply valve is activated below this level.
HIGH LEVEL	Water at maximum level.	The water supply valve is automatically deactivated.

9.1.3. Diagnostic mode

When the following conditions occur, the diagnostic messages override the scrolling information:

Display	*Description*	*Comment*
NO DEMAND	No demand	Modulating humidifier: No analog signal to the humidifier. On/Off humidifier: Humidity level has exceeded the set point of the humidistat or humidity level has exceeded the set point on the high limit humidistat or airflow is not detected by the air pressure switch.
SAFETY OPEN	Safety open	Humidity level has exceeded the set point on the high limit humidistat or airflow is not detected by the air pressure switch (modulating humidifier only).
DRAIN CYCLE	Drain cycle	The humidifier is in the automatic drain mode.
CONTACT DELAY	Contact delay	15 second delay for the power contactor to be activated.
OVER HEATED	Overheated	The temperature inside the container has exceeded the boiling temperature. The humidifier has automatically shut off.
PROBE DEFECTED	Defected probe	The water level sensor is not operational. The humidifier has automatically shut off.
NO LEVEL	No water	Water has not reached the level probe
FOAMING CYCLE	Drain foam	AFEC (Anti Foam Energy Conservation) detects foam. The humidifier drains for a few minutes and returns to normal operation.
DRN/PROB BLOCK	Drain or probe block	The humidifier drains but the water level does not decrease, the humidifier has automatically shut off.
Verify RH Sens	Verify RH sensor	Signal from either SHR10 or SHC80 used as space sensor is lower than 0.49 Vdc to terminal # 6 of humidifier. There might be a connection problem or a defective sensor.
Verify DCT Sens	Verify Duct sensor	Signal from SHC80 used as Hi limit duct sensor is lower than 0.49 Vdc to terminal # 4 of humidifier. There might be a connection problem or a defective sensor.

9.2. Programming

To enter into programming mode, please push [*] button at any time, to advance the program function to the next programming step in the menu push the same button twice.

Unless other instructions, you can make a selection by using [▲] & [▼] buttons on control panel.

Step	Display	Description	Comment
01	SETPOINT OUT 30%	Set point RH origin **Out**: Output set point to HRO20 **Int**: Internal. **Value** : from 00 to 100% *Default: Out 30%*	**To enable set point to humidifier display** • Press the [*] button to reach step 5, the RUNNING message will appear. • Press and hold the TEST button located on Main Pc board inside electrical compartment for 10 seconds. • Release the TEST button then press the RESET button on the same main pc board. Set point is now displayed on the humidifier display. If Output is selected, the set point is sent from the humidifier to the humidistat HRO20. If SHR10 or SHC80 is connected with humidifier, please select Internal, this will allow you to set up RH set point directly from Humidifier. To switch between Output and Internal Set point: Press and hold the TEST button located on Main Pc board inside electrical compartment until the change of the value.
02 optional	SETPOINT VAV OFF	Set point VAV allows Hi limit Duct humidity control **OFF**: Duct humidity control disable. **65%:** High limit Duct humidity set point value. *Default: OFF*	If Set point VAV is disabling, no humidity signal from the VAV Duct will be considered. If a Set point VAV value is set, the humidity output will be controlled by both space and High limit duct humidity signal. To allow Set point VAV value: Press and hold the TEST button located on Main Pc board inside electrical compartment until OFF is disappeared. You can then select the VAV Set point value desired by using [▲] & [▼] buttons on control panel. *Note: This Step will appear only if Internal has been selected at step 01*
03 optional	PROPBAND 3%	Prop Band allows the set up of proportional band. **From 3 to 9%** Default: 3%	Proportional band can be set from 3% to 9% of the humidity set points values (Space and High limit duct). Select the appropriate value by using [▲] & [▼] buttons on control panel. *Note: This Step will appear only if Internal has been selected at step 01*
04	DRAIN 8 HRS	Drain frequency. **From 1 to 24 hours** Default: 4 Hrs	Choose the initiation of a drain cycle for 1 to 24 hours. In general, harder the water is, more often the drain cycle should be. Drain cycle setting does not affect the AFEC system.
05	RUNNING 0645HRS	Number of running hours Information only, no possible set up.	The humidifier has operated 645 hours since the last service. After service, press simultaneously [▲] & [▼] buttons for 15 seconds to reset the number of hours of operation to zero. This procedure will stop the CHECK indicator from flashing.
06	SERVICE 1000HRS	Hour span between servicing. **From 400 to 1500 hours.** *Default: 1000 Hrs*	You can set the number of hours of operation before the humidifier will call for service (blinking of CHECK light every 4 seconds) from 400 to 1500 hours. In general, harder the water is, lower the number of hours of operation before service should be.
07	LOCK ON 80% PWR	Output Span. **From 00 to 100%.** *Default: 100%*	This option is available only on modulating model. i.e.: In this case, the humidifier will deliver 80% of its maximum rated output when at full demand.

Note: Any changes made in the Program Mode are saved into a non-volatile memory.

When the humidifier is anywhere in the Menu Driven Program Mode, the normal operation of the humidifier is halted.

To resume normal operation, exit the menu program mode by pressing the [*] button until the alphanumeric display is clear. (This happens after step 7)

10. Control p.c. board

- The Printed circuit board designated "PCB970819" is common to all SK300 series humidifier, ON/OFF or modulating, this pc board is equipped with an advanced microprocessor which controls all the humidifier functions.
- The Printed circuit board which is directly connected onto the main pc board is installed only on modulating model (suffix M).

10.1. Main p.c. board

- There are 3 water level L.E.D.'s in the upper right hand side. They indicate the relative water height as sensed by the water level sensor.
  - o If HI is illuminated: water supply valve shuts off,
  - o If LO is off: An evaporation chamber filling is ordered, water supply valve opens.
  - o If LA is off: No water is detected by the water level sensor, the power to the elements is shot off.
- The 3 status L.E.D.'s at the center left side operate as follows:
  - o FILL indicates that the water supply valve is feeding water.
  - o DRAIN indicates the drain pump empties the container.
  - o CONT indicates that power is supplied to the elements and the humidifier is producing steam.
- TEST button should be used when commissioning the humidifier; this will initiate a preprogrammed start-up cycle. The start up cycle cleans the supply water and the evaporation chamber (see section 11 – start-up). This button enable also the set point control of the humidistat to humidifier display (see section 9.2 –Programming) (this is available only on Modulating model).
- RESET button enable the bypass of start up sequence.

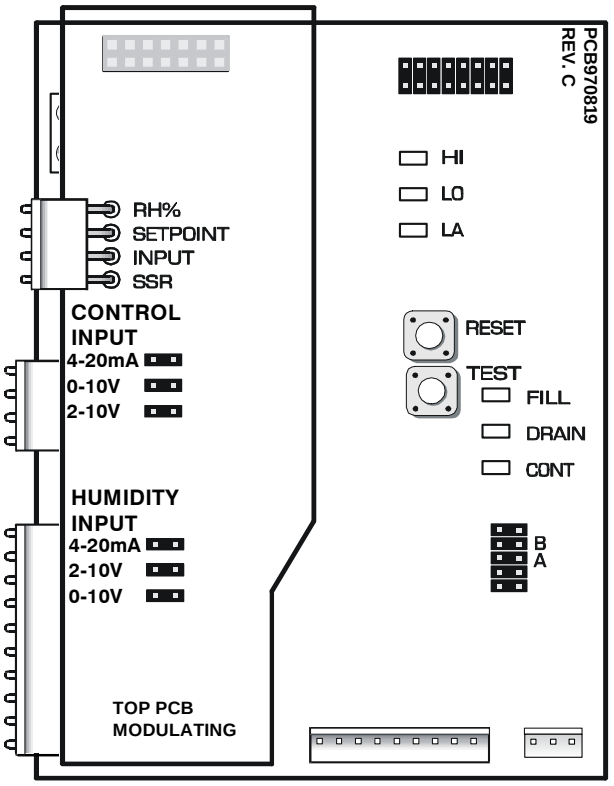

(Illus. 53)

10.2. Modulating p.c. board

- The 3 jumpers at the center of the p.c. board (Control Input) are used for proper selection of the incoming control signal. See section 8.2.4 - Control signals.
- The 3 jumpers at the bottom of the p.c. board (Humidity Input) are used for proper selection of the incoming humidity signal. See section 8.2.3 – Humidity signals.

11. Start up procedure

We recommend to strictly following this start-up procedure in order to avoid any anomaly resulting from wrong cleaning of the components.
In case of problem or discrepancy see section 14 – Trouble shouting guide.

1. Make sure that mechanical, electric and plumbing connection are done and secured.

2. Make sure that low voltage control circuit is done and correct.

3. Turn on the water shut off valve (outside of the humidifier) and check that the drain connections are connected to the main drain line of sufficient diameter.

4. Turn on the power to the humidifier from the circuit breaker disconnect. The POWER indicator should go on.

5. Push the TEST button located on the main pc board. This pc board is located in the electrical compartment.

6. This will start up a pre-programmed start-up cycle. This start-up cycle will test functions of the humidifier and will flush out any dirt in the humidifier and supply lines.
   This cycle will last about 1 hour.
   Note:
   a) the front panel rocker switch will not affect the performance of the start-up cycle.
   b) In the case of modulating humidifier, there must be a demand signal of at least 50% for the start-up cycle to operate correctly.
   c) To bypass at any time the start-up cycle and to proceed directly into normal operation, press the RESET button located on the main pc board.

7. The front panel rocker switch may be left in the AUTO position during the start-up cycle. This will result in normal operation of the humidifier as soon as the start-up cycle is finished.

8. Your humidifier is now fully operational.

12. Service

12.1. General

- The humidifier is set to give service demand on the alphanumeric display and on the CHECK light after is has reached the service hours setting (see section 9.2- Programming).
- The routine service is a cleaning of the evaporation chamber.
- We recommend setting the service demand depending on the water quality, the frequency of automatic drain cycles and the demand placed on the humidifier.
- The manual cleaning frequency can be from every 2 months to once a year.

12.2. Evaporation chamber cleaning

WARNING: RISK OF BURN. THE EVAPORATION CHAMBER AND ITS CONTENT CAN BE EXTREMELY HOT, CHECK TEMPERATURE BEFORE HANDLING.

1. ***Cool down evaporation chamber***
   - Set the front panel switch "AUTO/OFF/DRAIN" to DRAIN. The humidifier will command a drain cycle.
   - Ensure that the evaporation chamber is completely empty. When it is empty, set the front panel switch "AUTO/OFF/DRAIN" to AUTO, the evaporation chamber will be fill with cool water; the FILL light will be illuminated.
   - As soon as the evaporation chamber is full of cool water, the FILL light will extinguish, Set the front panel switch "AUTO/OFF/DRAIN" to DRAIN again.
   - At the end of this drain cycle, check the temperature of the evaporation chamber, to do so, open the front door of the humidifier and touch the evaporation chamber with the back of your hand, If it is cool enough you can go the sequence #2 if not repeat the cool down operation until it will be cool enough.
   - Set the front panel switch "AUTO/OFF/DRAIN" to OFF

2. ***Shut down of the electrical supply***
   CAUTION: RISK OF ELECTRIC SHOCK. SHUT DOWN THE ELECTRIC SUPPLY OF THE HUMIDIFIER
   - Turn off the main power supply to the humidifier.

3. ***Disconnection of heating element(s)***
   - Remove the high voltage connector located at the top right hand side of the mechanical compartment.
     - Model SK302 to 306: Unscrew the connector.
     - Model SK310 to SK360: squeeze the locking ears of the high voltage connector and pull it apart.

4. ***Disconnection of the other accessories.***
   - Disconnect the connector from the water level sensor; this connector is attached to a cable that enters the mechanical compartment just below the high voltage connector. Squeeze the locking ear of the connector and pull it apart.
   - Remove the connection to the high limit sensor (klixon), located on the top cover of the evaporation chamber.

5. ***Disconnection of steam hose and water pipe***
   - Remove the steam hose(s) at the top of the evaporation chamber.
   - Remove the water drain/fill connection to the evaporation chamber. To do this, unscrew the nipple located on the lower right hand side of the evaporation chamber.

6. ***Removing the evaporation chamber***
   - The evaporation chamber may now be freely removed from the humidifier cabinet.
   - **CAUTION**: The evaporation chamber still contains 1 inch of water, ensure that you do not reverse this water on yourself.
   - Make sure that your footing is secure when lifting out the evaporation chamber. On large humidifier (SK340 and SK360) it may weigh more than 35 lb (15 Kg). This operation may require another person to assist you in removing the evaporation chamber.

7. ***Opening of the evaporation chamber***
   - Remove the cover from the evaporation chamber.
     - Model SK302 to 306: Unlatch the 3 latches located around the evaporation chamber, *caution: these latches are very tight, we recommend you to help you with a screwdriver or pliers to do this.*
     - Model SK310 to SK360: Turn the latches of the 4 or 8 latches located around the evaporation chamber.
   - Remove the cover from the evaporation chamber.

8. ***Cleaning of the evaporation chamber***

- Pour out any remaining water and scale that is on the bottom of the container
- To clean out the remaining scale from the container, use a stiff brush (synthetic filament only) and some vinegar or any weak acid for cleaning stainless steel.
- **WARNING**: The use of wire brush or any non-recommended acid will void the warranty.
- If the amount of scale to remove is very important, the service demand frequency is too low for the quality of supply water, you should then adjust this service demand frequency (see section 9.2 – Programming). Too much scale may impair the normal operation of the humidifier or damage it; in this case warranty will be voided.

9. ***Cleaning of the other components***

- The components installed on the cover (heating element and water level sensor) and the cover itself should be cleaned as necessary, only if some scale has been accumulated on them.
- Proceed as per the cleaning of the container (step #8).
- Removing and cleaning of the water level sensor.
  A chamber protects the water level sensor. Cleaning of the sensor requires removing this chamber.
  - Unscrew the 2 screws holding the chamber, located on the cover.
  - Carefully remove the chamber, do not touch or damage the water level sensor.
  - Clean out the water level sensor by using a clean soft cloth.

  CAUTION: The water level sensor is covered by a thin lay of Teflon, any scratch or damage to this lay of Teflon may provoke failure of the humidifier.
  - Clean or the chamber by proceeding as per the main container (see step #8).
  - Re-attach the clean chamber to the cover and screw in the 2 screws on the top of the cover.

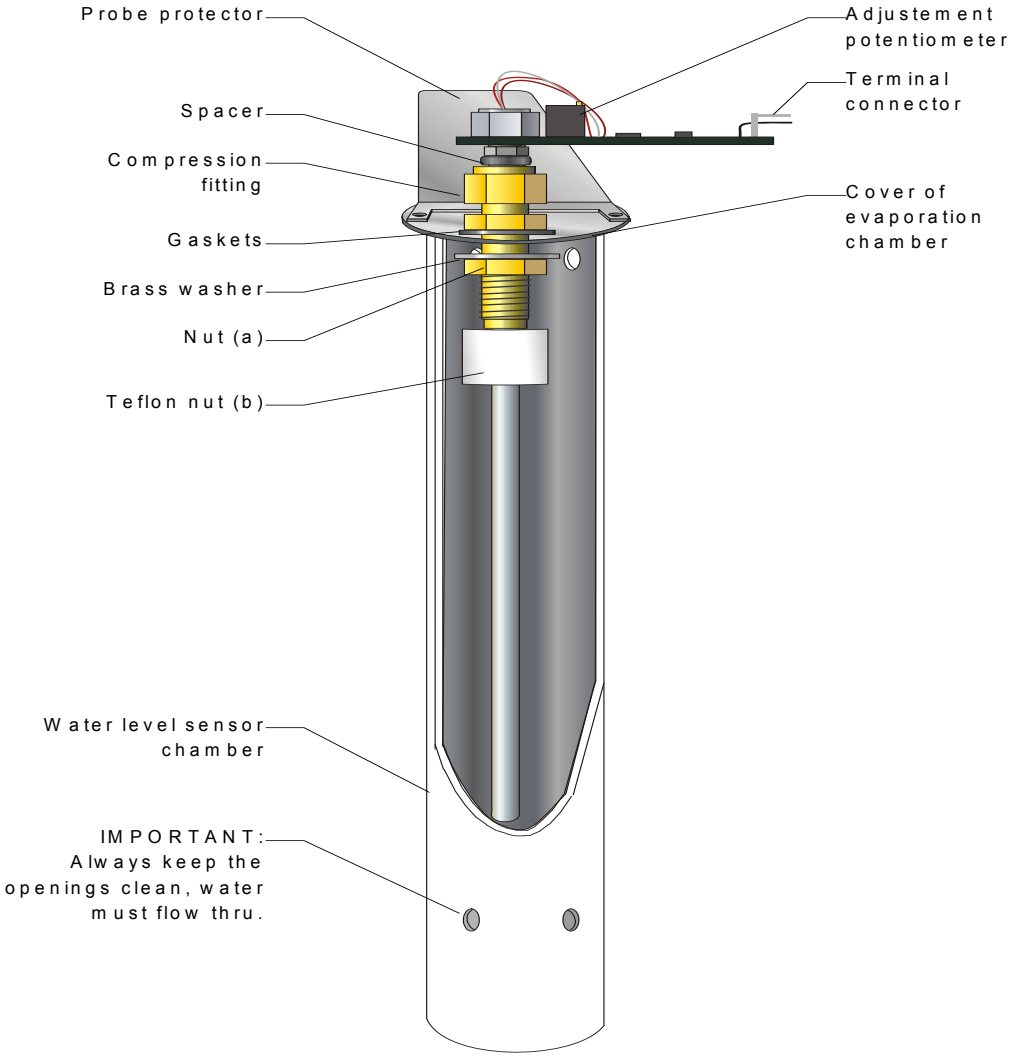

(Illus. 54)

10. Re assembly of the evaporation chamber

- Rinse out the container and the cover with water.
- Check the cover gasket, and make sure that the gasket is well placed before to re-install the cover on the container. The water level sensor should be in front of the drain/fill connection of the evaporation chamber.
- Tighten the latches around the cover (3,4 or 6).
- Replace the evaporation chamber in the humidifier.
- Tighten the water drain/fill connection nipple.
- Replace the steam hose(s) on the outlet of the evaporation chamber.
- Reconnect the connector of the water level sensor, high temperature switch (klixon) and the high voltage connector of the heating element.
  CAUTION: RISK OF FIRE. MAKE SURE THE HIGH VOLTAGE CONNECTOR IS PROPERLY LOCKED. AN UNPROPER CONNECTION MAY PROVOKE ELECTRIC ARCS.

11. Start-up of the humidifier

- Turn on the main power supply to the humidifier.
- The POWER light of the front panel should be illuminated.
- Press the button to enter the programming mode, to reset the Running hours (see section 9.2-Programming Step 5).
- Set the front panel switch "AUTO/OFF/DRAIN" to AUTO. The humidifier will command to fill the evaporation chamber with water; the FILL light should be illuminated.
  It is possible that the CHECK light will illuminate because the evaporation chamber is empty. This signal will extinguish as soon as the normal condition will be reach.
- If there is a humidity demand, the humidifier will produce steam again.

13. Exploded view & Bill of Material

13.1. Exploded view

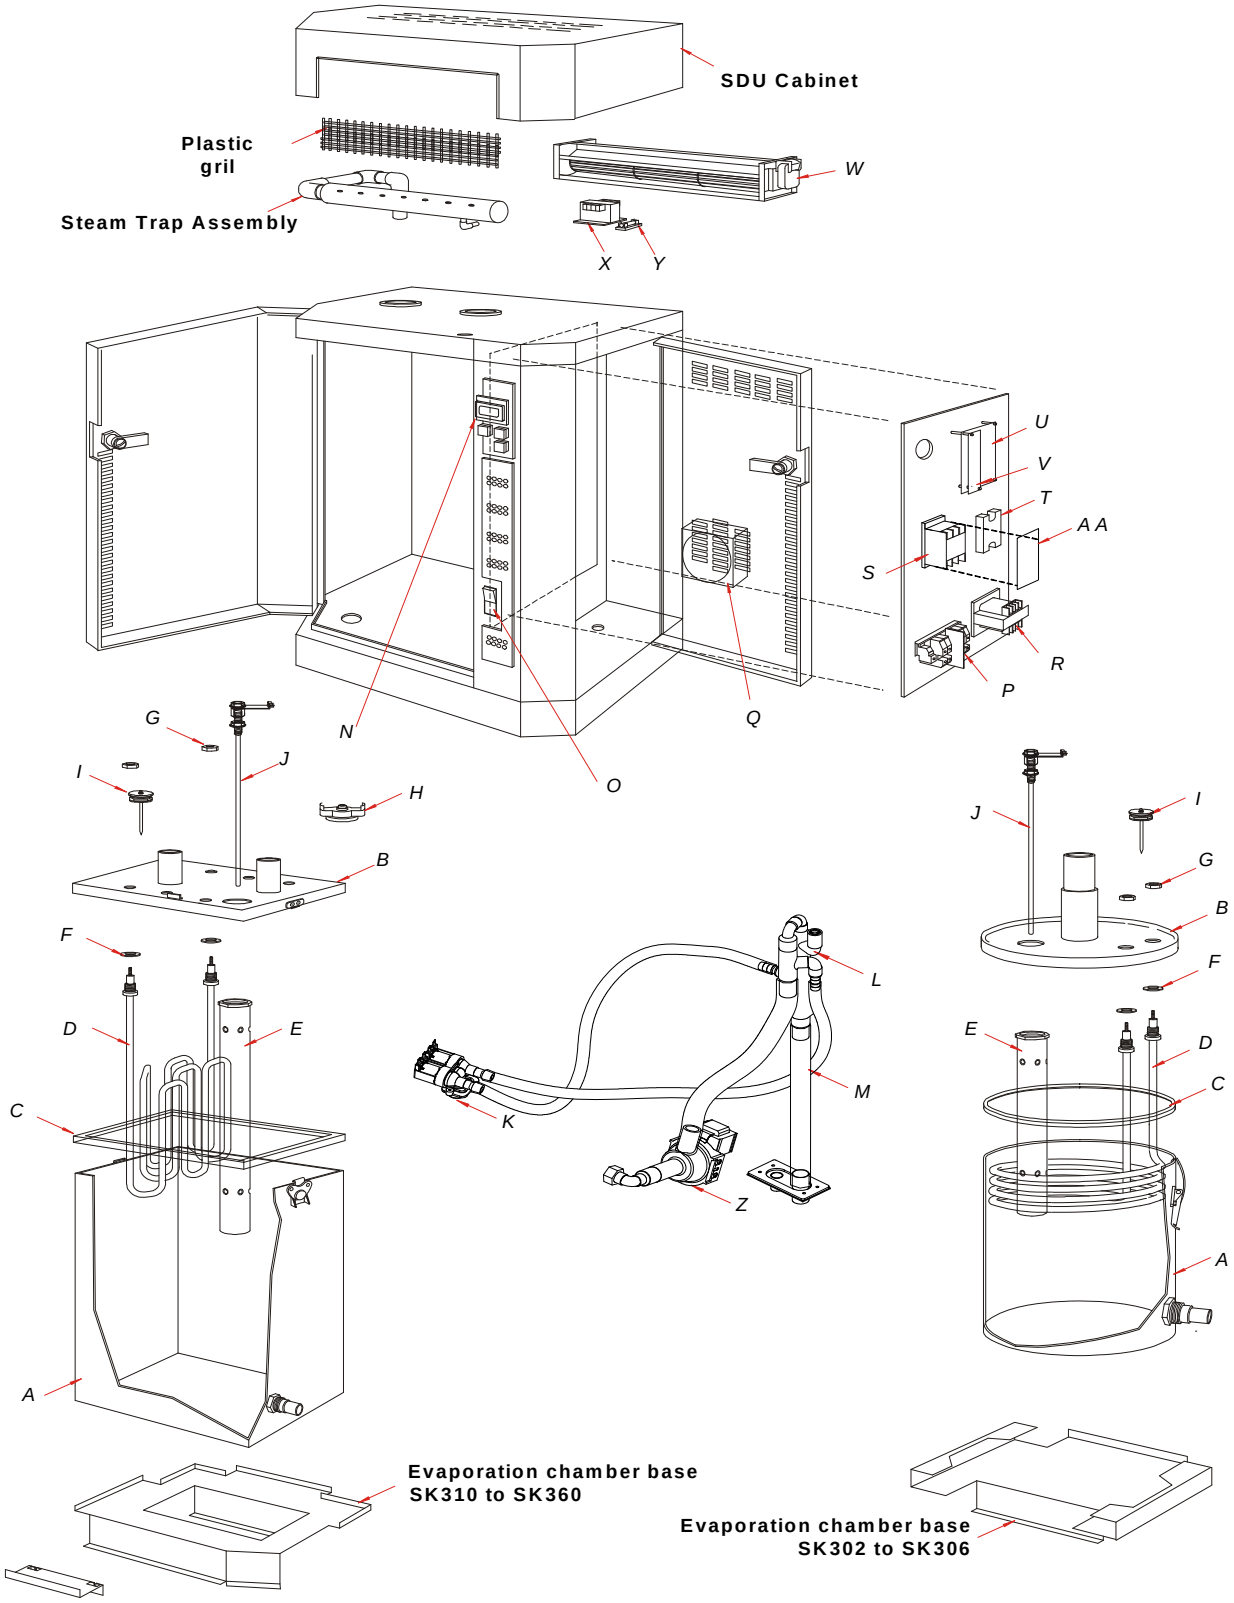

(Illus. 55)

13.2. Bill of material

Item	Description	Model	Part number
A	Container of evaporation chamber	SK302 to 306	SW CONTSMA-ASSY
		SK310 to SK330	SW CONTMED-ASSY
		SK340 & SK360	SW CONTLAR-ASSY
B	Cover of evaporation chamber	SK302 to 306 (1 phase)	SP 4018-M
		SK304 to 306 (3 phases)	SP 4019-M
		SK310 & SK314	SP 4183A
		SK320 & SK330	SP 4183B
		SK340	SP 4186
		SK360	SP 4185A
C	Evaporation chamber gasket	SK302 to 306	SP 1008
		SK310 to SK330	SP 1021
		SK340 & SK360	SP 1022
D	Heater element	See table below	
E	Level sensor chamber	SK302 to 306	SP 4196-M
		SK310/314/320/340	SP 4197-M
		SK330 & SK360	SP 4198-M
F	Washer (elements)	SK302 to SK360	SP 1005
G	S/S hex. Jam nut (elements)	SK302 to SK360	SP 2330
H	High temperature switch (klixon)	SK302 to SK360	SP 3035
I	Foam sensor	SK302 to 306	SW FOAMSM-ASSY
		SK310/314/320/340	SW FOAMMED-ASSY
		SK330 to SK360	SW FOAMLG-ASSY
J	Water level sensor	SK302 to 306	SW PROBSM-ASSY
		SK310/314/320/340	SW PROBMD-ASSY
		SK330 & SK360	SW PROBLAR-ASSY
K	Water supply valve	SK302 to SK360	SP 6007
L	Fill and drain trap assembly	SK302 to 306	SW TRAPSMA-P
		SK310 to SK330	SW TRAPMED-P
		SK340 & SK360	SW TRAPLAR-P
M	Silicone tubing ½”	SK302 to SK360	SP 1023A
	Silicone tubing ¾”		SP 1023B
	PCV tubing ½”		SP 1027
N	Alphanumeric display	SK302 to SK360	SW SK300DISPL-ASSY
O	"AUTO/OFF/DRAIN" rocker switch	SK302 to SK360	SW SKSWITCH-ASSY
P	Terminal block and high voltage connectors	SK302 to SK360	/
Q	Cooling fan	SK302 to SK360	SP 3007
R	Transformer	See table below	
S	Contactor	See table below	
T	Solid State Relay	50 A	SP 3102
		90 A	SP 3103
		125 A	SP 3105
U	Main printed circuit board	SK302 to SK360	NW SK300MAIN-TEST
V	Modulating printed circuit board	SK302 to SK360	NW SK300MODULSS
W	SDU fan	SDU I	SW FANSDU1-RET
		SDU II	SW FANSDU2-RET
		SDU III	SP 3010
X	Transformer	See table below	
Y	Fuse inside SDU	SDU I and SDU 2	SP 5105
		SDU 3	SP 5106
Z	Drain pump	SK302 to SK360	SP G4101

Model	Voltage	D Heater element	R Transformer	S Contactor	X SDU Transformer
SK302	240V/1~	SW 5932	SP 3310	SP 3029	SP 3312
	208V/1~	SW 5933	SP 3308	SP 3029	SP 3305
	480V/1~	SW 5934	SP 3321	SP 3029	SP 3329
	600V/1~	SW 5935	SP 3341	SP 3029	SP 3349
SK304	240V/1~	SW 5937	SP 3310	SP 3029	SP 3312
	208V/1~	SW 5940	SP3308	SP 3029	SP 3305
	208V/3~	SW 5924	SP3308	SP 3080	SP 3305
	480V/1~	SW 5941	SP 3321	SP 3029	SP 3329
	480V/3~	SW 5923	SP 3321	SP 3080	SP 3329
	600V/1~	SW 5942	SP 3341	SP 3029	SP 3349
	600V/3~	SW 5925	SP 3341	SP 3080	SP 3349
SK306	240V/1~	SW 5938	SP 3310	SP 3100	SP 3312
	208V/1~	SW 5943	SP3308	SP 3220	SP 3305
	208V/3~	SW 5933	SP3308	SP 3080	SP 3305
	480V/1~	SW 5944	SP 3321	SP 3029	SP 3329
	480V/3~	SW 5934	SP 3321	SP 3080	SP 3329
	600V/1~	SW 5945	SP 3341	SP 3029	SP 3349
	600V/3~	SW 5935	SP 3341	SP 3080	SP 3349
SK310	208V/3~	SW 5959	SP 3308	SP 3220	SP 3305
	480V/3~	SW 5958	SP 3321	SP 3080	SP 3329
	600V/3~	SW 5957	SP 3341	SP 3080	SP 3349
SK314	208V/3~	SW 5946	SP 3308	SP 3027	SP 3305
	480V/3~	SW 5947	SP 3321	SP 3080	SP 3329
	600V/3~	SW 5948	SP 3341	SP 3080	SP 3349
SK320	208V/3~	*	*	*	-
	480V/3~	SW 5950	SP 3321	SP 3100	SP 3352
	600V/3~	SW 5951	SP 3341	SP 3080	SP 3353
SK330	480V/3~	SW 5952	SP 3321	SP 3027	SP 3352
	600V/3~	SW 5939	SP 3341	SP 3220	SP 3353
SK340	208V/3~	*	*	*	-
	480V/3~	SW 5950	SP 3321	SP 3220 (2x)	-
	600V/3~	SW 5951	SP 3341	SP 3027	-
SK360	480V/3~	SW 5952	SP 3321	SP 3027 (2x)	-
	600V/3~	SW 5939	SP 3341	SP 3220 (2x)	-

***** Available, please consult factory.

14. Trouble shouting guide

Problem	Indicator	Display	Causes	Corrective actions
Humidifier does not operate (Power Off)	Power: Off Check: Off Fill: Off Steam: Off Drain: Off		• The humidifier is not powered. • The low voltage fuse is open. • The high temperature switch is open. • Wires harnesses inside the humidifier are not secured properly.	• Check for the main power supply and fuses. • Check the transformer, the low voltage fuse. • Check the high temperature switch, the wires harnesses and the Main pc board.
Humidifier does not operate (Power On)	Power: On Check: Off Fill: Off Steam: Off Drain: Off	NEP 3.0 SK310M	• The rocker switch is at the OFF position. • Wire harness from the LED display panel to the Main pc board is not secured properly.	• Press the rocker switch to the AUTO position. • Check the white color wire harness. • Press the RESET button on the Main pc board.
Humidifier does not produce steam (No Demand)	Power: On Check: Off Fill: Off Steam: Off Drain: Off	NO DEMAND	• Modulating humidifier: no analog signal. • On/Off humidifier: no demand from humidistat or air flow is not detected by air pressure switch or high limit humidistat is open. • Control wires are not properly secured to the terminal blocks.	• Verify the setting of the humidistat. • Check the fan operation. • Check the operation of the high limit humidistat. • Verify the connections of the wires to the control terminal blocks.
Humidifier does not produce steam (Safety Open) Modulating humidifiers only	Power: On Check: Off Fill: Off Steam: Off Drain: Off	SAFETY OPEN	• Air flow is not detected by air pressure switch or high limit humidistat is open. • Control wires are not properly secured to the terminal blocks.	• Check the fan operation. • Check the operation of the high limit humidistat. • Verify the wires to the control terminal blocks #1 & 2.
No water inside the evaporation chamber Or Humidifier will not stop draining	Power: On Check: On Fill: On Steam: Off Drain: Off	NO LEVEL	• Humidifier is filling with water and has not reached or is not reaching the high of the water level sensor. • Humidifier is not filling with water.	• Check if the shut off valve on the water supply line is open. • Verify the operation of the fill valve. • Check the fill valve strainer and the external strainer are not blocked.
Humidifier is always on Foam cycle	Power: On Check: Off Fill: On Steam: Off Drain: On	FOAMING CYCLE	• Excessive foaming condition inside the evaporation chamber. • Foaming sensor is grounded.	• Verify the quality of the supply water. • Verify if chemical products were used to clean the evaporation chamber during maintenance. Rinse with water the chamber properly. • Check the setting of the Drain cycle. Reduce the time between Drain cycles.

Problem	Indicator	Display	Causes	Corrective actions
Humidfier is operating and the CHECK light is blinking	Power: On Check: Blink Fill: Off Steam: On Drain: Off	SCROLL MODE	• The Running hours have exceeded the Service hours.	• Service the evaporation chamber, see section 14. • Reset the Running hours to cancel the blinking of the CHECK light, see section 9.2 STEP 5.
Humidifier is not operating and the CHECK light is ON	Power: On Check: On Fill: Off Steam: Off Drain: Off	OVER HEATED	• The electronic temperature sensor inside the water level sensor had sensed abnormal temperature. • The quick connector to the water level sensor was removed while the humidifier was operating. • The brown wire connected to the top left corner of the Main pc board is not properly secured.	• Verify if the humidifier was operating below the standard water level then replace the item J. • If connector was removed while powered was still ON then press on the main pc board the TEST button until the Drain light is ON then press RESET once. • Verify the connection of the brown wire to the Main pc board.
Humidifier is not operating and the CHECK light is ON	Power: On Check: On Fill: Off Steam: Off Drain: Off	PROBE DEFECTED	• The water level sensor is damaged.	• Replace the water level sensor, item J.
Humidifier will not drain	Power: On Check: On Fill: Off Steam: Off Drain: Off	DRN/PROB BLOCK	• During a Drain or Foaming cycle, the water level sensor has sensed the water level has not decreased.	• Verify the drain pump, the fill and drain water pipe connection, the water level sensor chamber are not obstructed.
Humidifier does not operate and display is blank	Power: On Check: Off Fill: Off Steam: Off Drain: Off		• The following components can be the cause of this problem: water level sensor (item J), main pc board (item U), modulating pc board (item V) or the LCD display (item N).	• Call factory for trouble shooting instruction.
Humidifier is producing steam and display is blank	Power: On Check: Off Fill: Off Steam: On Drain: Off		• The potentiometer contrast is set at the lowest setting. • The display ribbon cable is not connected properly. • The LCD display is defective.	• Adjust the contrast of the display. • Verify the connections of the ribbon cable are properly secured and on the right side (red line on cable). • Replace the LCD display, item N.

Personal notes

1. General

Unless otherwise arranged, in writing, the acceptance of the Order Confirmation by the purchaser includes acceptance of the "General Conditions of Sale and Warranty" of National Environmental Products, Ltd hereafter referred to as NEP.

2. Incoterms

The international rules for interpretation of trade terms "Incoterms" as defined by the ICC Incoterms publication no. 460 from 1990, shall apply to the commercial terms used herein.

3. Confirmation of Order

- NEP shall not be deemed to have accepted an order until written "**Order Confirmation**" from NEP is issued to the purchaser.
- It is the responsibility of the purchaser to verify that all information concerning his/her order is correct and to notify NEP In writing, of any discrepancy prior to the order being shipped. In the event of a change or correction to an existing order, a second "Order Confirmation" will be issued by NEP.

4. Price

- Our prices are net, Ex-works Montreal in U.S. Currency, unless stated otherwise.
- Minimum orders shall be $50.00 minimum.
- Shipping and Handling charges are $5.00 minimum per order unless the shipment is billed to the purchaser's account or shipped freight collect.
- NEP reserves the right to adjust accepted prices in the event of alterations in rates of exchange, variations in costs of materials, changes in wages, interference on the part of the Government or similar conditions over which NEP has no control.

5. Payments terms

- Major credit cards, C.O.D., Prepayment.
- For open account, invoices are payable within 30 days from the date of invoice without no deduction, unless specify otherwise.
- An interest charge of 2% per month will be included on all overdue payments.
- No new order will be process if invoices are not paid within 45 days.

6. Transfer of ownership

The goods shall remain the property of NEP until the full payment for the goods has been received by NEP.

7. Delivery terms

- Shipments are Ex-works **400 Lebeau, St Laurent, Quebec, H4N 1R6, CANADA** unless notified otherwise.
- Unless special instructions, the order will be delivery in the way which NEP deems best without guaranteeing this to be the cheapest way of transport.
- For International Order, a written designation naming the freight forwarding agent is required and will remain in effect until notified otherwise.
- Any discrepancy, damage or breakage should be reported in writing both to NEP and to the Carrier within 5 working days from the receipt date.

8. Risk

From the moment of delivery, the purchaser shall bear all risks for the goods and NEP shall not be responsible for loss and damage incurred during transportation.

9. Delivery time

- Delivery time is stated approximately and depends on the product ordered, please allow a minimum of:
  a) 2 weeks for processing North American order.
  b) 6 weeks for processing International order.
- We will make every effort to adhere to our delivery promises, but will not accept order or contract cancellation or any liability for any direct or indirect losses that may arise for any reason whatsoever as a result of our failure to adhere to such promises.

10. Return of good

- Goods received by the purchaser cannot be returned unless a completed "**R.M.A. Form**" (Return Material Authorization Form) has been issued by NEP's **Customer Service.**
- Any returned goods must be sent to NEP 400 Lebeau, St Laurent, Quebec, H4N 1R6, CANADA, unless stated otherwise by the R.M.A. Form, accompanied with the completed "R.M.A. Form", the **R.M.A. number** shall be prominently displayed on the shipping box. Unauthorized returns will be refused.
- Any returned goods must be sent freight prepaid. Any goods that come to us freight collect will be refused and returned to sender unless previously agreed to by us in writing on the "R.M.A. Form".
- Goods returned for credit shall be in condition for resale in the original box and properly packaged. Units, accessories or components that have been installed are not returnable and not refundable.
  Credit is subject to an overhead charge of 30% of the invoice plus shipping & handling if returned within 30 days of the invoice date and 50% from 30 to 60 days.
- Non standard product (SK units with special feature), Multisteam manifolds and any DI unit are not returnable and not refundable.

11. Warranty

- Provided that the terms of payment are observed, the purchaser is offered a warranty of **24 months** from the original purchase date of delivery for any NEP's **standard product**, provided the equipment has been properly installed and operated in accordance with NEP instructions.
- The warranty covers faulty manufacture, design and/or defective materials and is limited to the equipment and components. The warranty shall cease to be valid in the event of misapplication, incorrect installation, **improper maintenance** or any other incorrect uses or misuse of the product.
- For the SK series, the warranty furthermore ceases to be valid if the user disconnects or removes any electronic or mechanical components prior disconnecting the input power. NEP assumes no responsibility for repairs made on equipment, unless performed by NEP's authorized personnel.
- The defective product or component shall be returned in accordance with the paragraph 10 (Returns of goods) as described in this document.
- NEP agrees under the warranty to repair or replace (at the discretion of NEP) such standard product or component, which upon examination by NEP are found to be defective.
- Product or component replaced or repaired under warranty will be sent back to the purchaser, standard freight paid by NEP
- Expenses in connection with travelling time, dismantling and mounting shall not be paid by NEP
- Guarantee for products or components sold but not manufactured by NEP, is only given to the same extent as given to NEP, however, not exceeding the normal NEP warranty.
- Parts used for repairs are warranted for the balance of the term of the warranty on the original humidifier or 90 days, whichever is longer.
- Any repair made, after the original warranty period, at the NEP facilities are warranted for 1 month from the date of repair.

12. Proper law and jurisdiction

This contract is and shall be deemed to have been made in the province of Quebec, CANADA, and shall in all respects, be governed by the province of Quebec laws.